

USER MANUAL



SMART DLP PROJECTOR



Thank you for choosing the P960X Mini Portable Projector. We are excited to guide you through its features, functions, and proper usage.

This manual has been designed to provide you with clear and concise instructions to help you get the most out of your P960X.

Before you begin using your product, we recommend reading this manual thoroughly to optimize your projector's performance.

Inside, you'll find step-by-step instructions, helpful tips, and important information to assist you in setting up and using your P960X effectively.

If you ever encounter any questions or need assistance, don't hesitate to reach out to our Customer Support Team at: support@basegadets.com (OR SIMPLY SCAN THE QR CODE BELOW)



CONTENTS

Overview of Projector	1
Power on/Power off	3
Sharpness	3
HDMI IN	4
Keystone Correction	5
Wi-Fi Setting	7
Hotspot Setting	8
BT Setting	9
Language Setting	10
iMirror	11
Miracast	12
EShareServer	13
Play 3D Mode	14
APP Install/Uninstall	15
File Browser	16
Factory data reset	17
Safety	18

P960X MINI PROJECTOR OVERVIEW

A.  → ON/OFF
OFF ON

B.  → 

C.  → DC-IN
DC

G.  → Focus

I.  → Reset
R


D.  → USB 2.0
USB


E.  → HDMI IN
HD

F.  → USB 3.0
USB

H.  → TF Card
TF

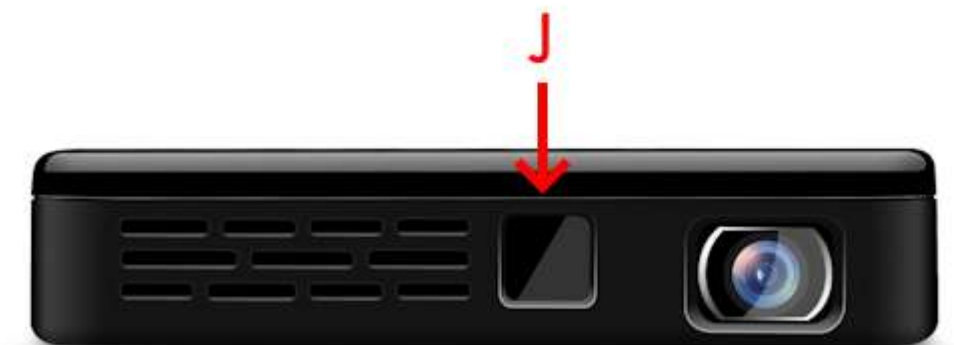

J.  → IR
IR

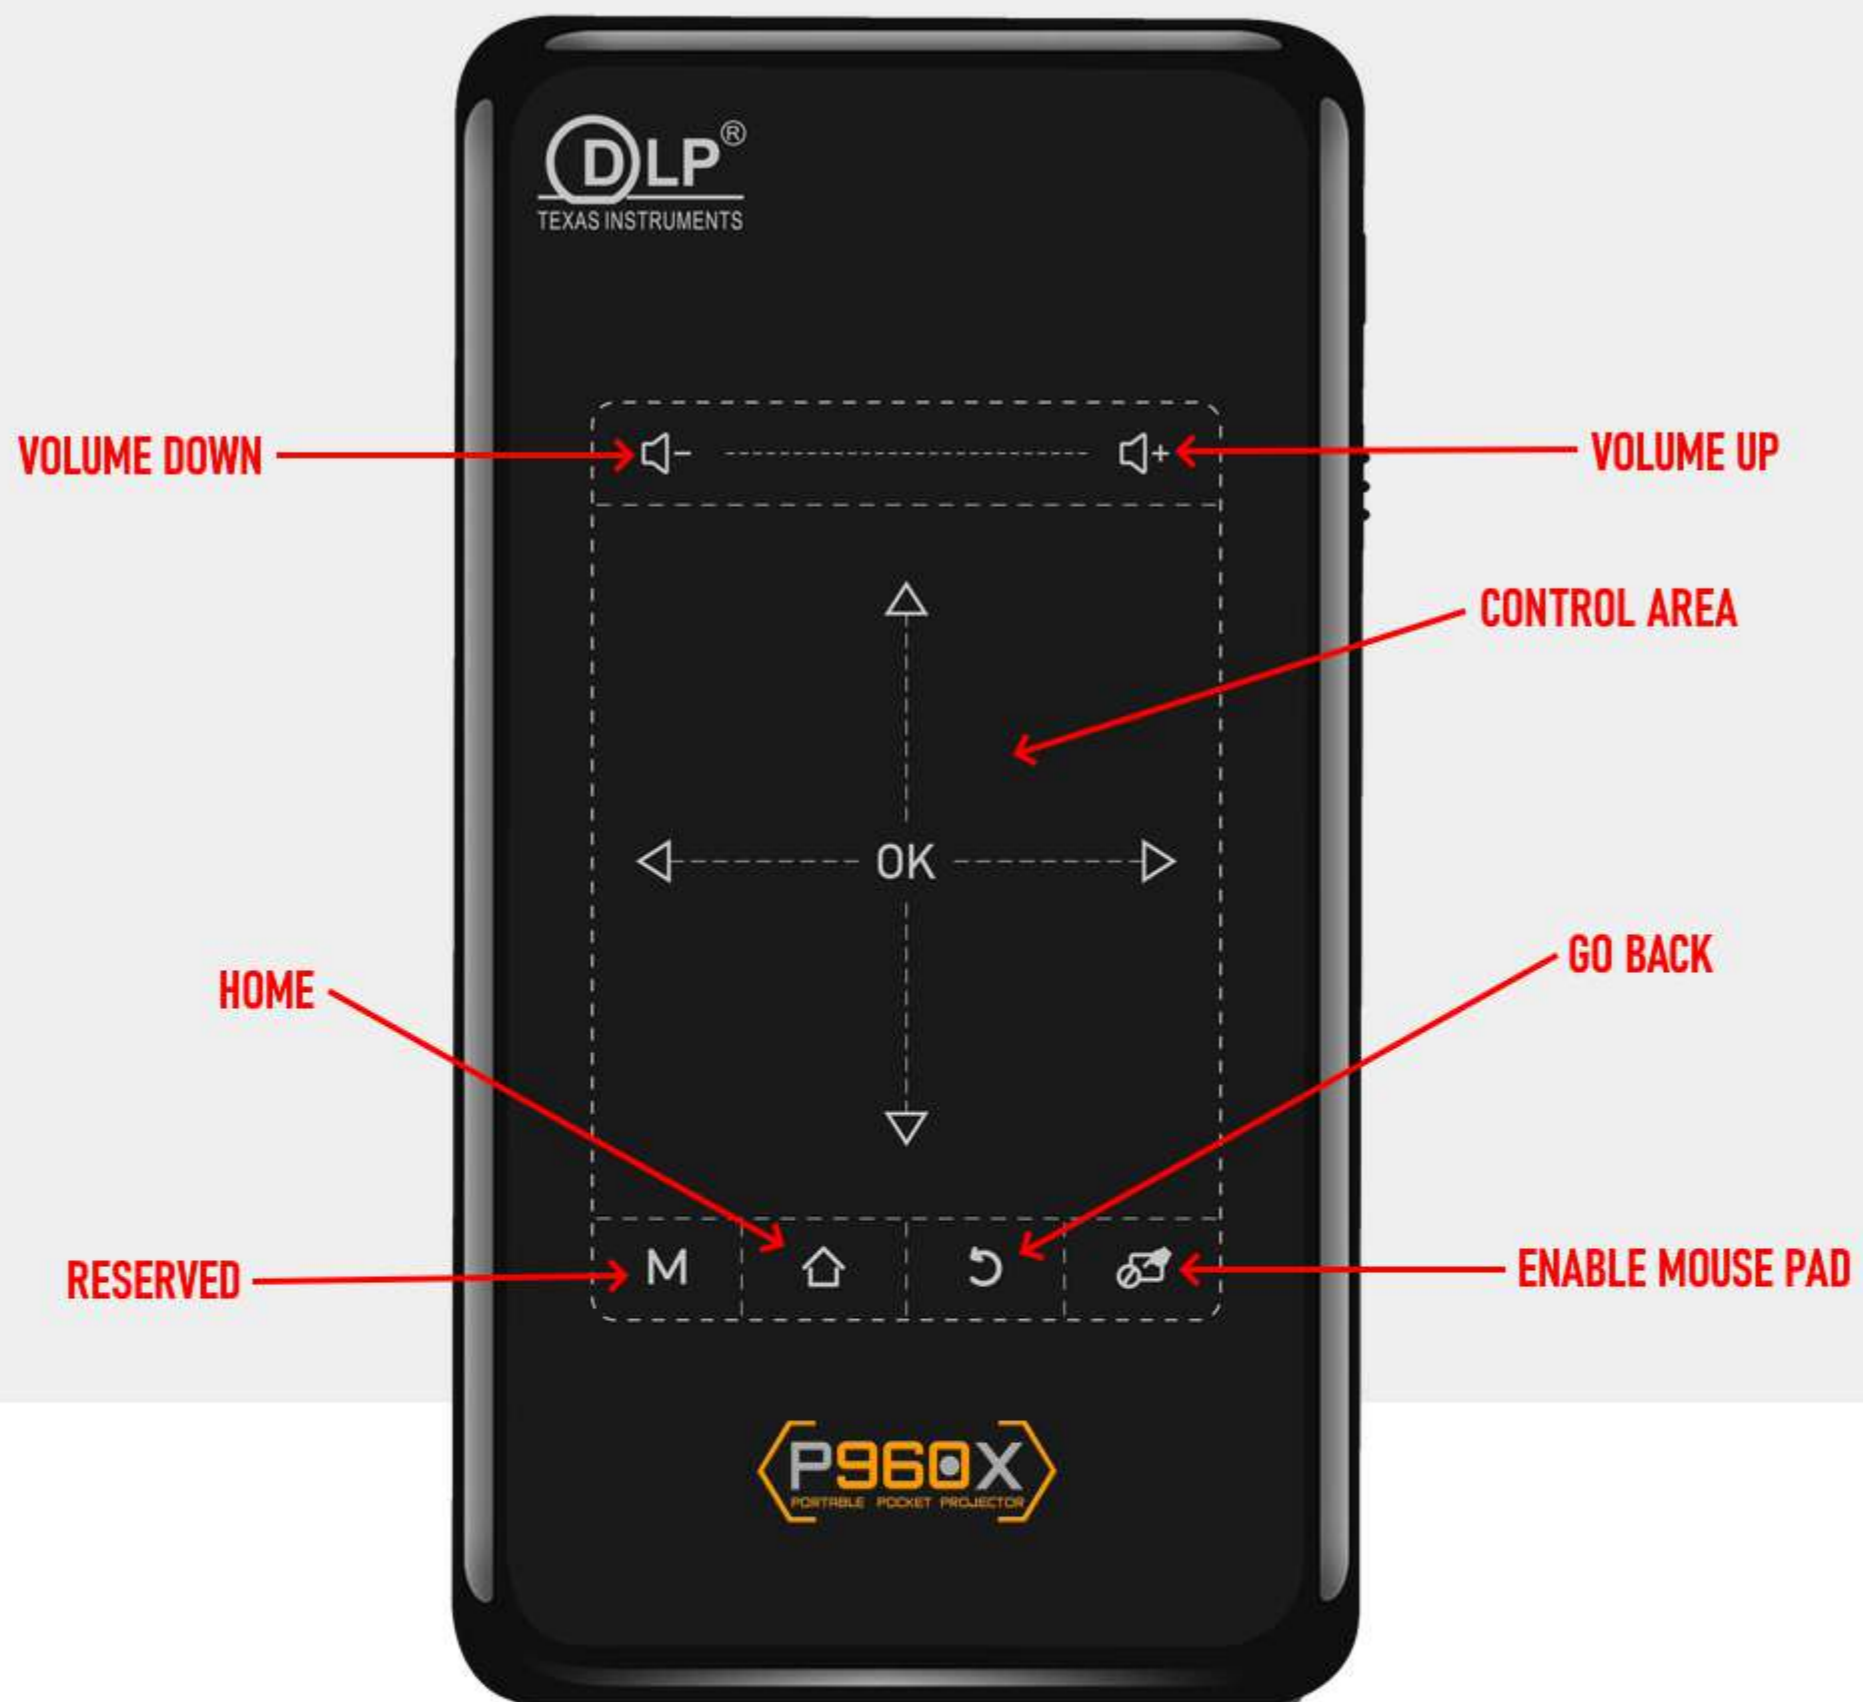





POWER ON/OFF

Power on

1. Switch the  to the "ON" state, press the  to power on, the indicator is blue, waiting for the screen to display.
2. If the power is insufficient, please connect the power adapter to the **【DC-IN】** of the projector for charging.



Power off


Press the  to power off, the interface of shutdown will pop up, click "OK" , after the projector stops running, please switch the  to the "OFF" state, otherwise the battery will still be in a power-consuming state.

DISPLAY SHARPNESS

The sharpness of the picture can be adjusted by turning the  of projector.

HDMI IN


1. One end of the HD line is connected to the  interface of the projector, and the other end is connected with the  interface of computer/other devices.
2. Enter the **HDMI OUT** on the main interface of the projector.

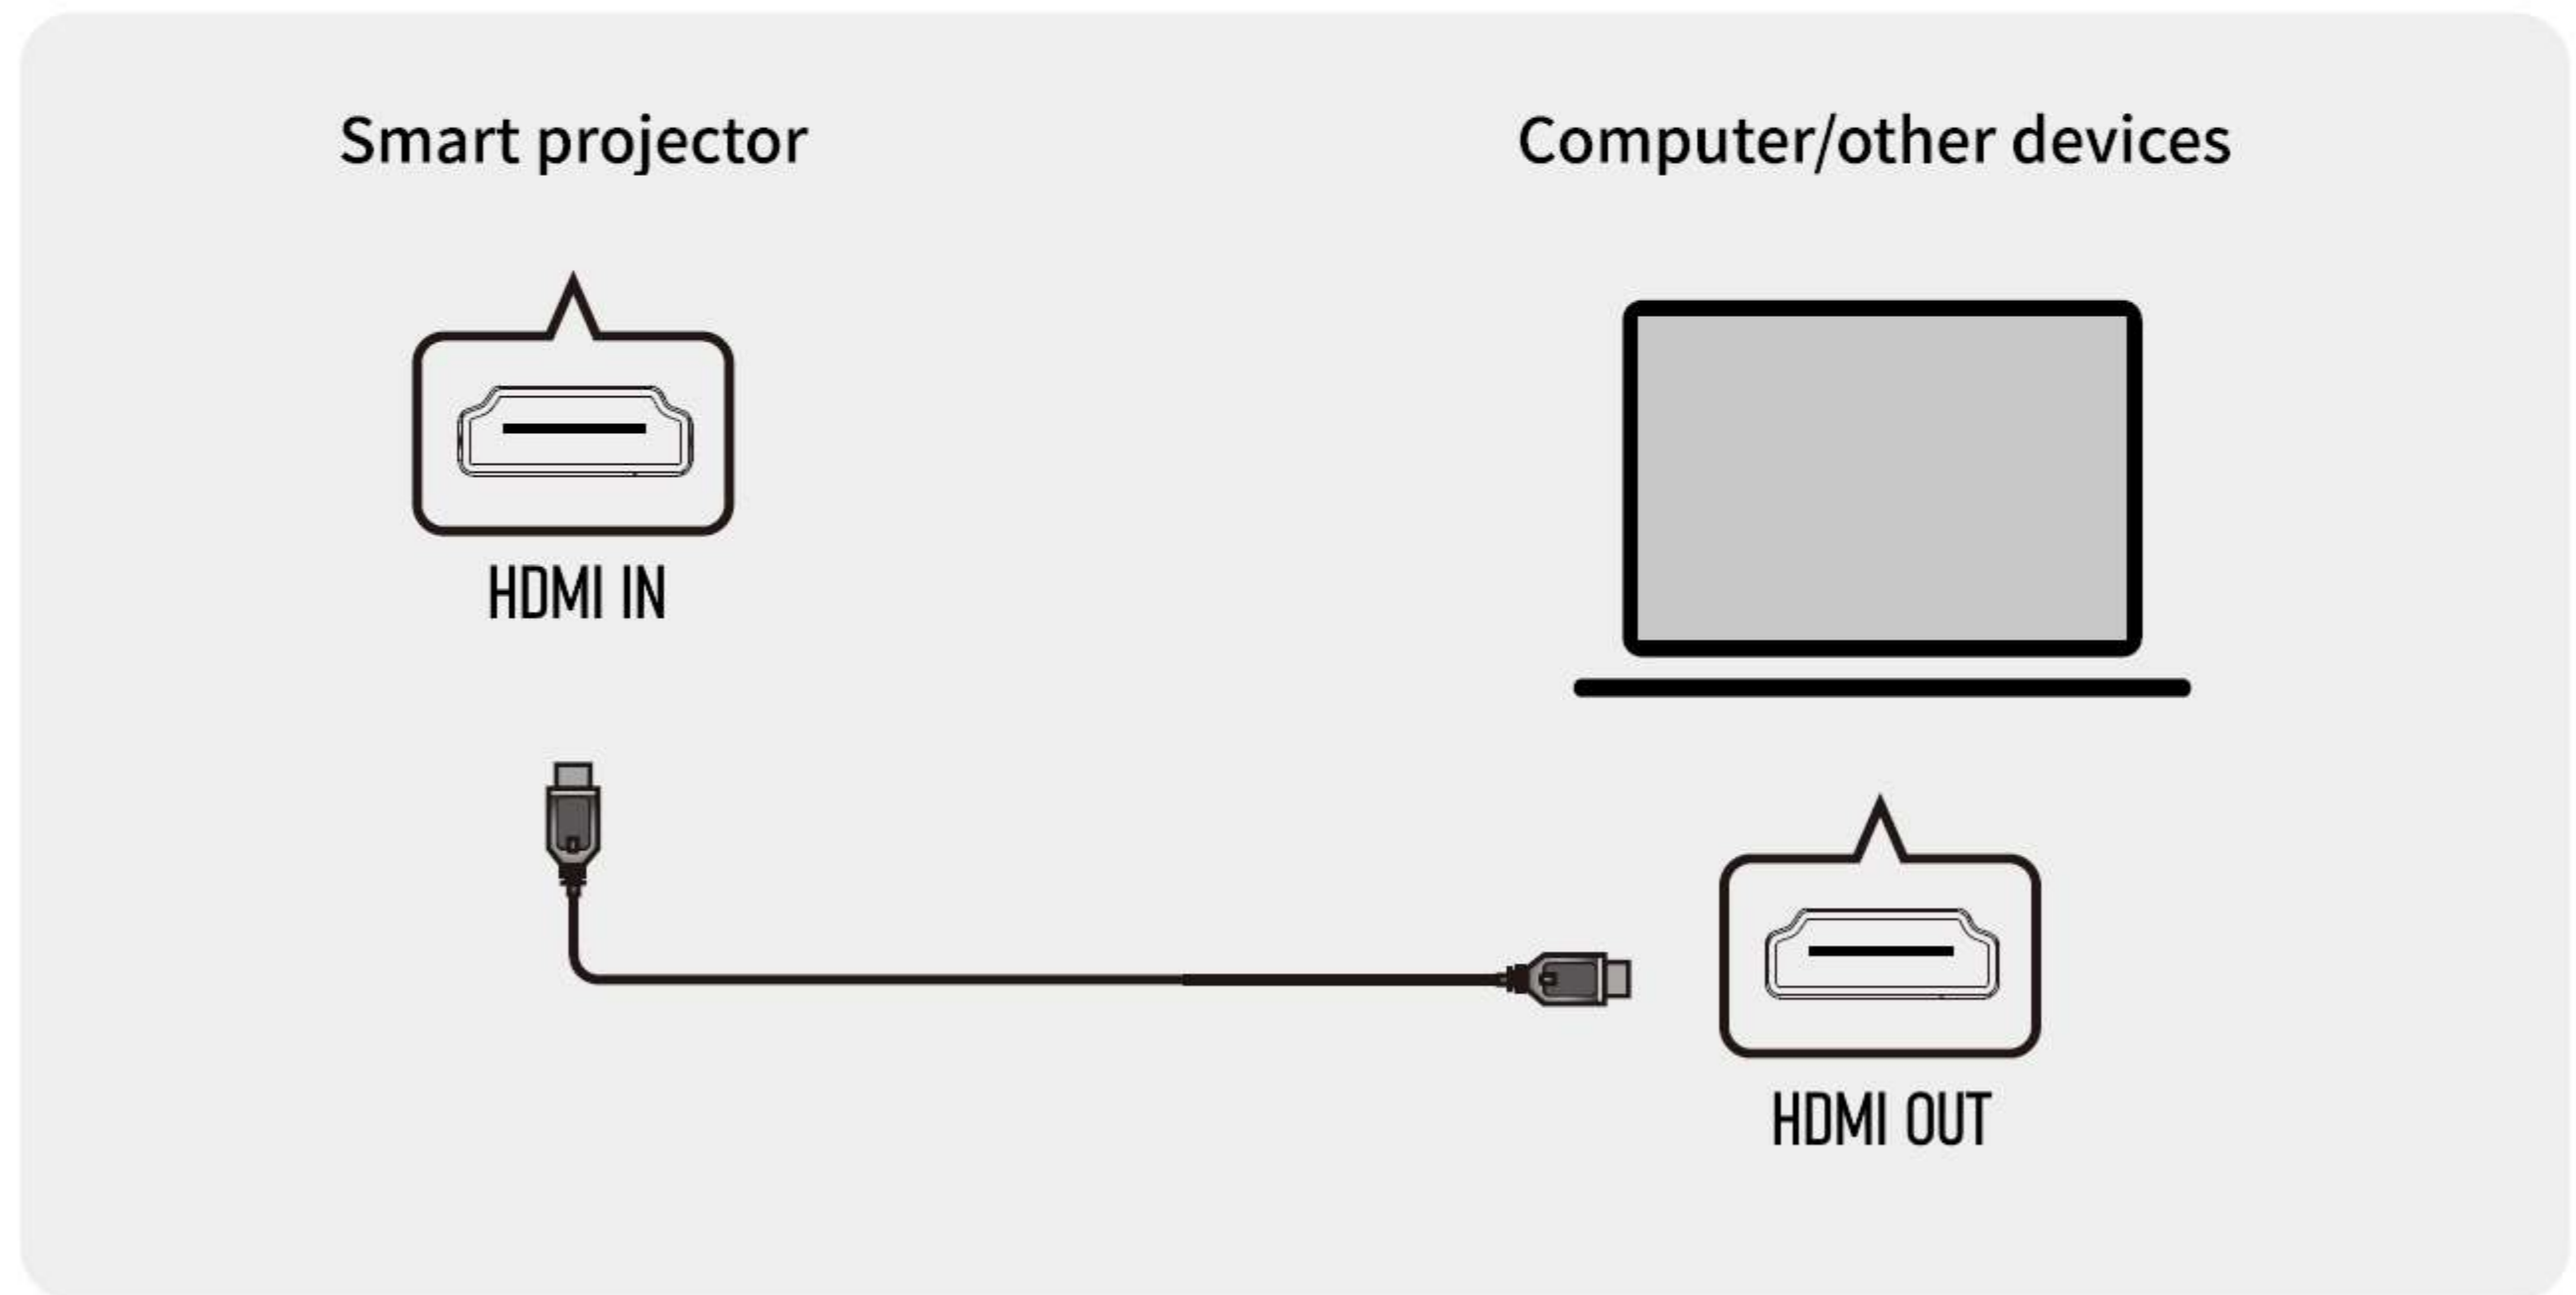

KEYSTONE CORRECTION SETTING


Keystone Correction Vertical

Enter "Settings" on the main interface → "Projection Setting" → "Keystone Correction Vertical", the projector default auto vertical keystone correction, also supports manual correction.

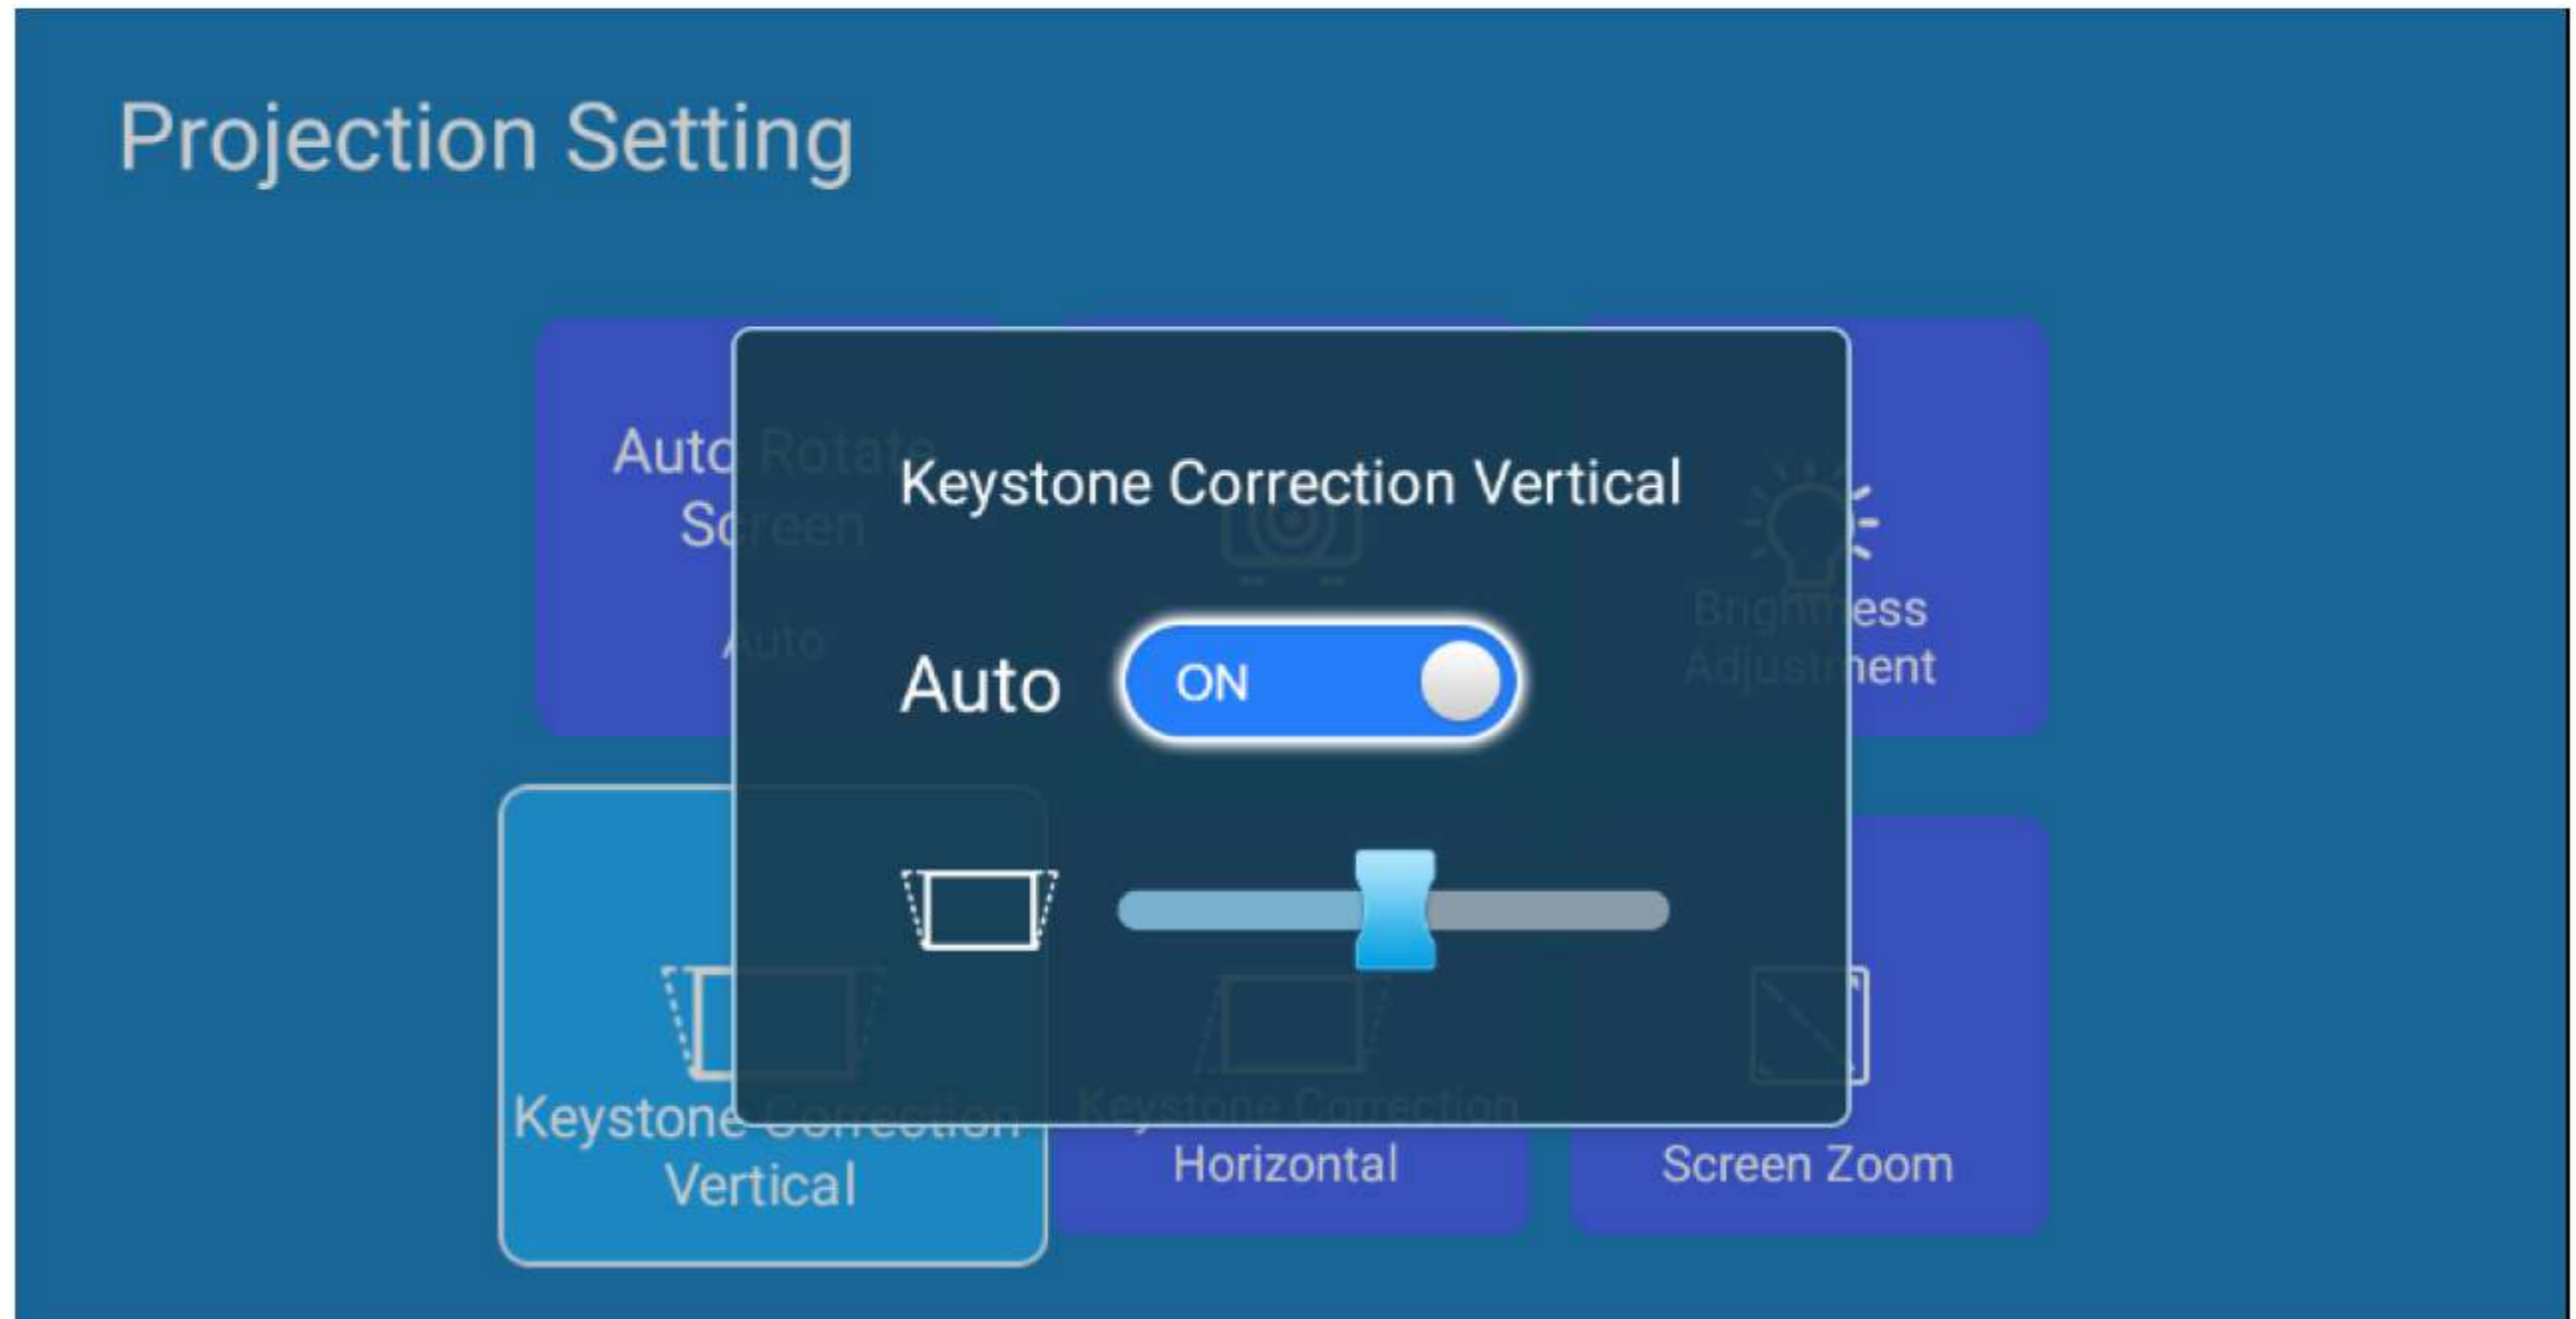

Keystone Correction Horizontal

 
Enter "Settings" on the main interface → "Projection Setting" → "Keystone Correction Horizontal", the projector supports manual horizontal keystone correction, also supports multi angle adjustment.

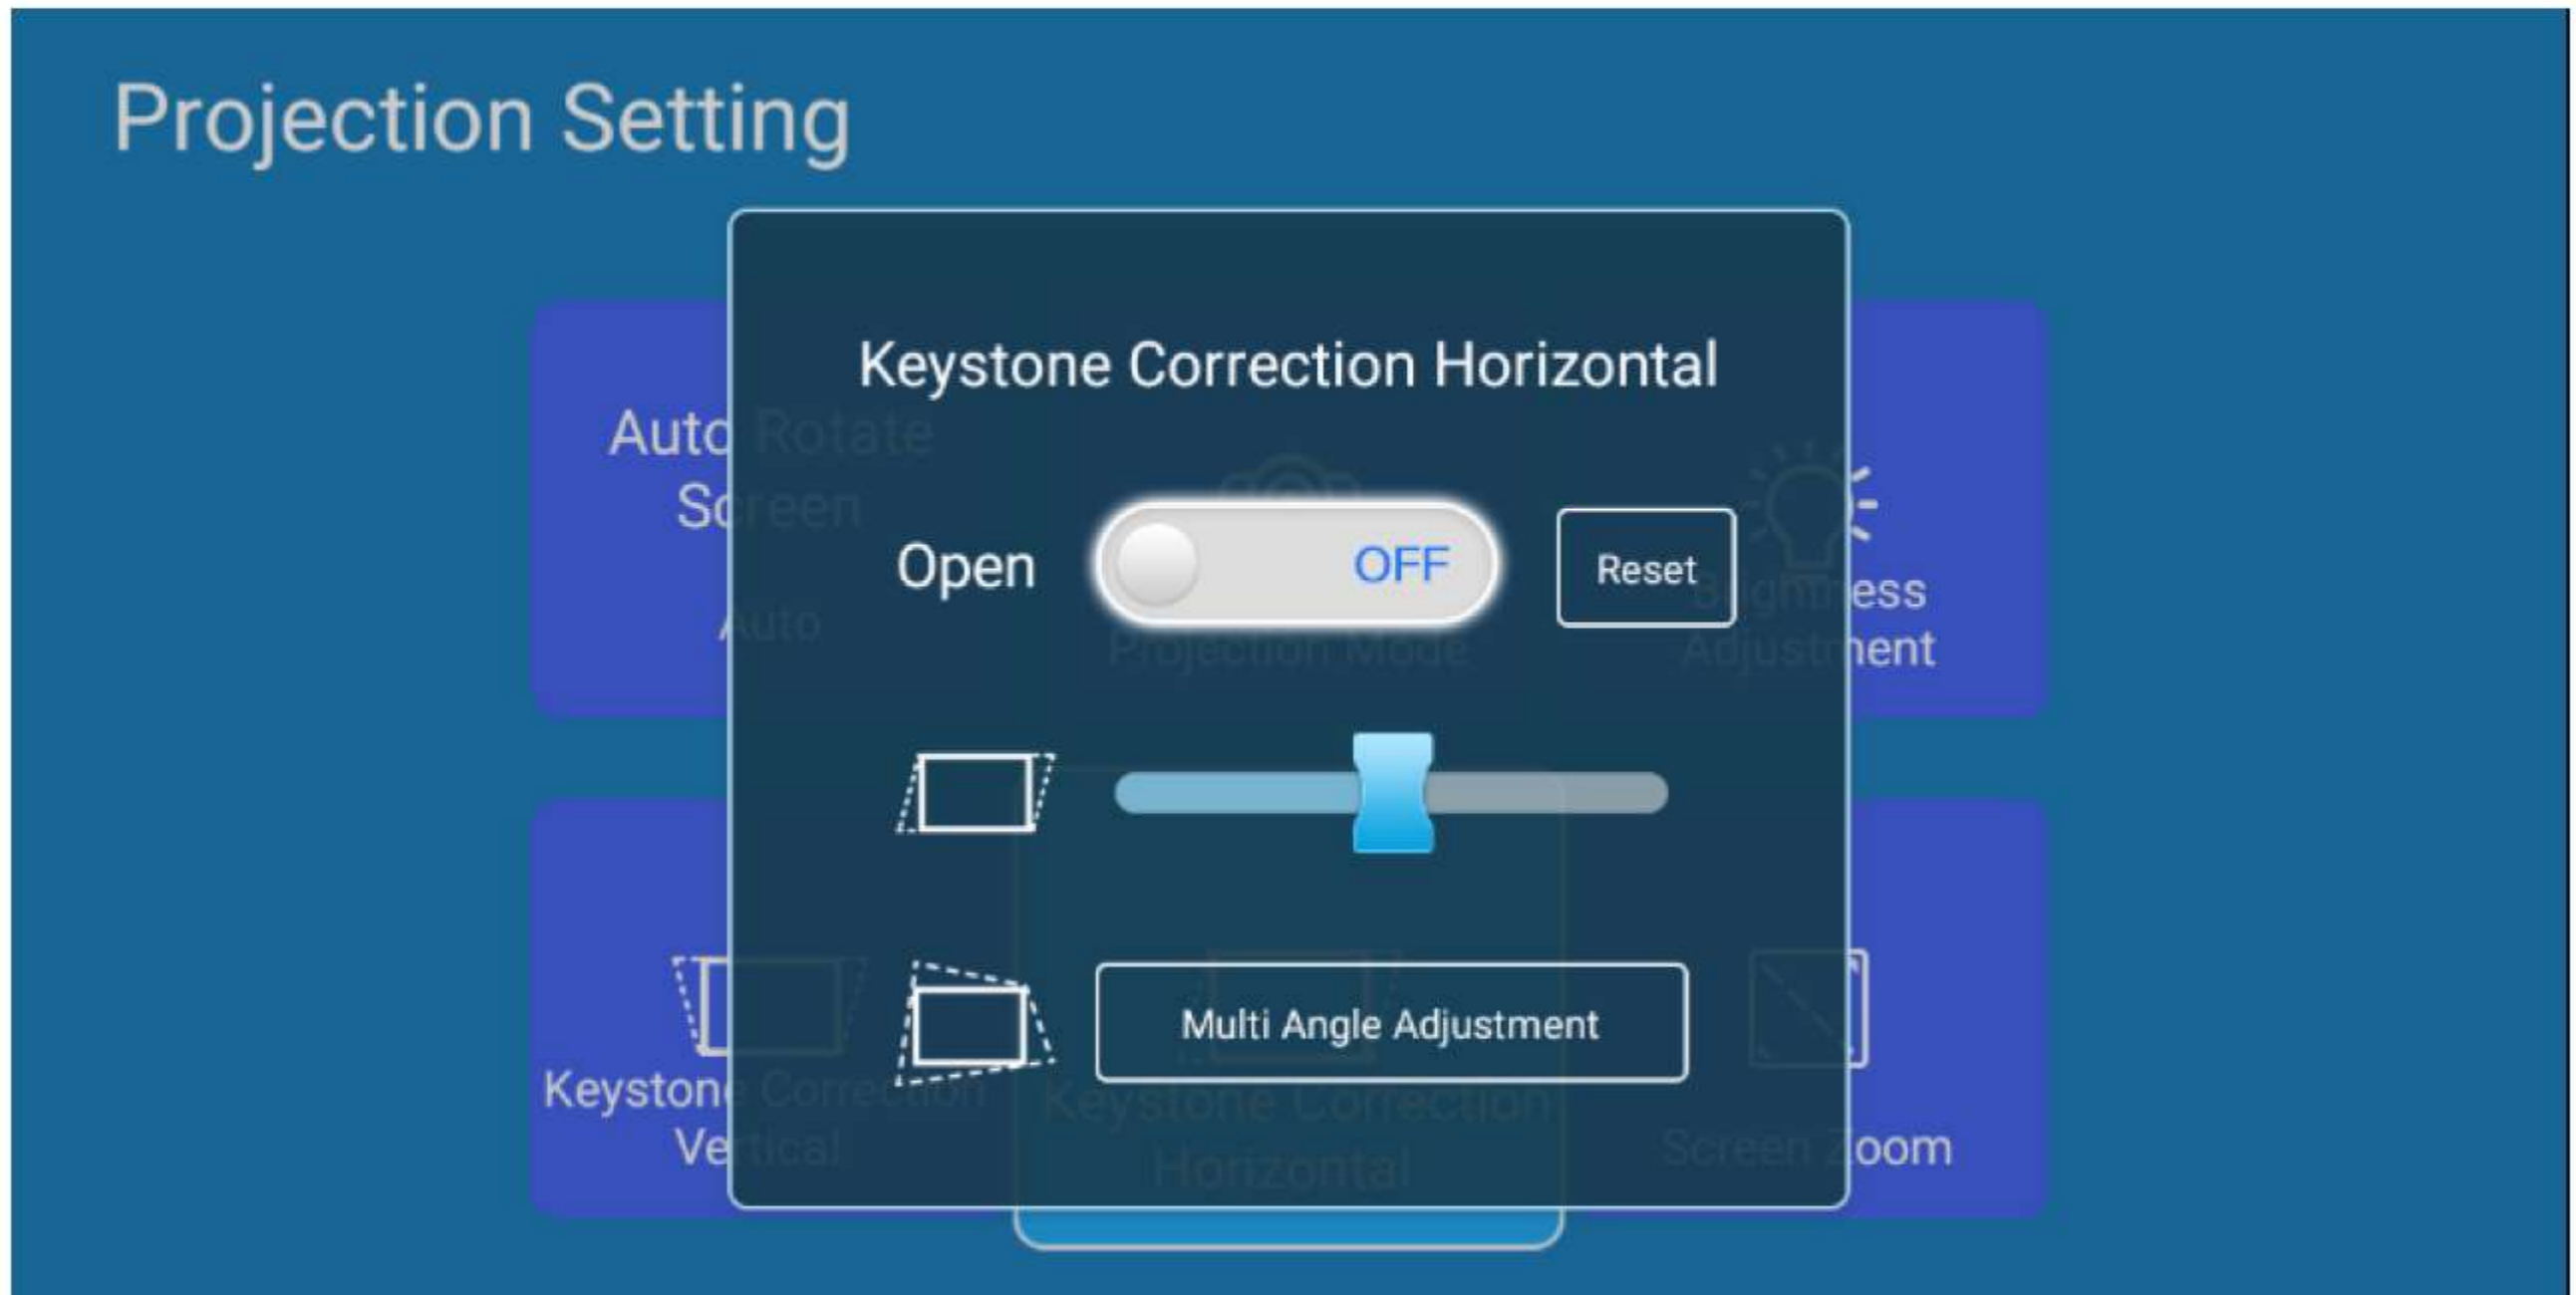

Note: Different models of products, the function of "Keystone Correction Horizontal" will be different, depending on the actual product.


Keystone Correction Horizontal

 Enter "Settings" on the main interface → "Projection Setting" → "Keystone Correction Horizontal", the projector supports manual horizontal keystone correction, also supports multi angle adjustment.

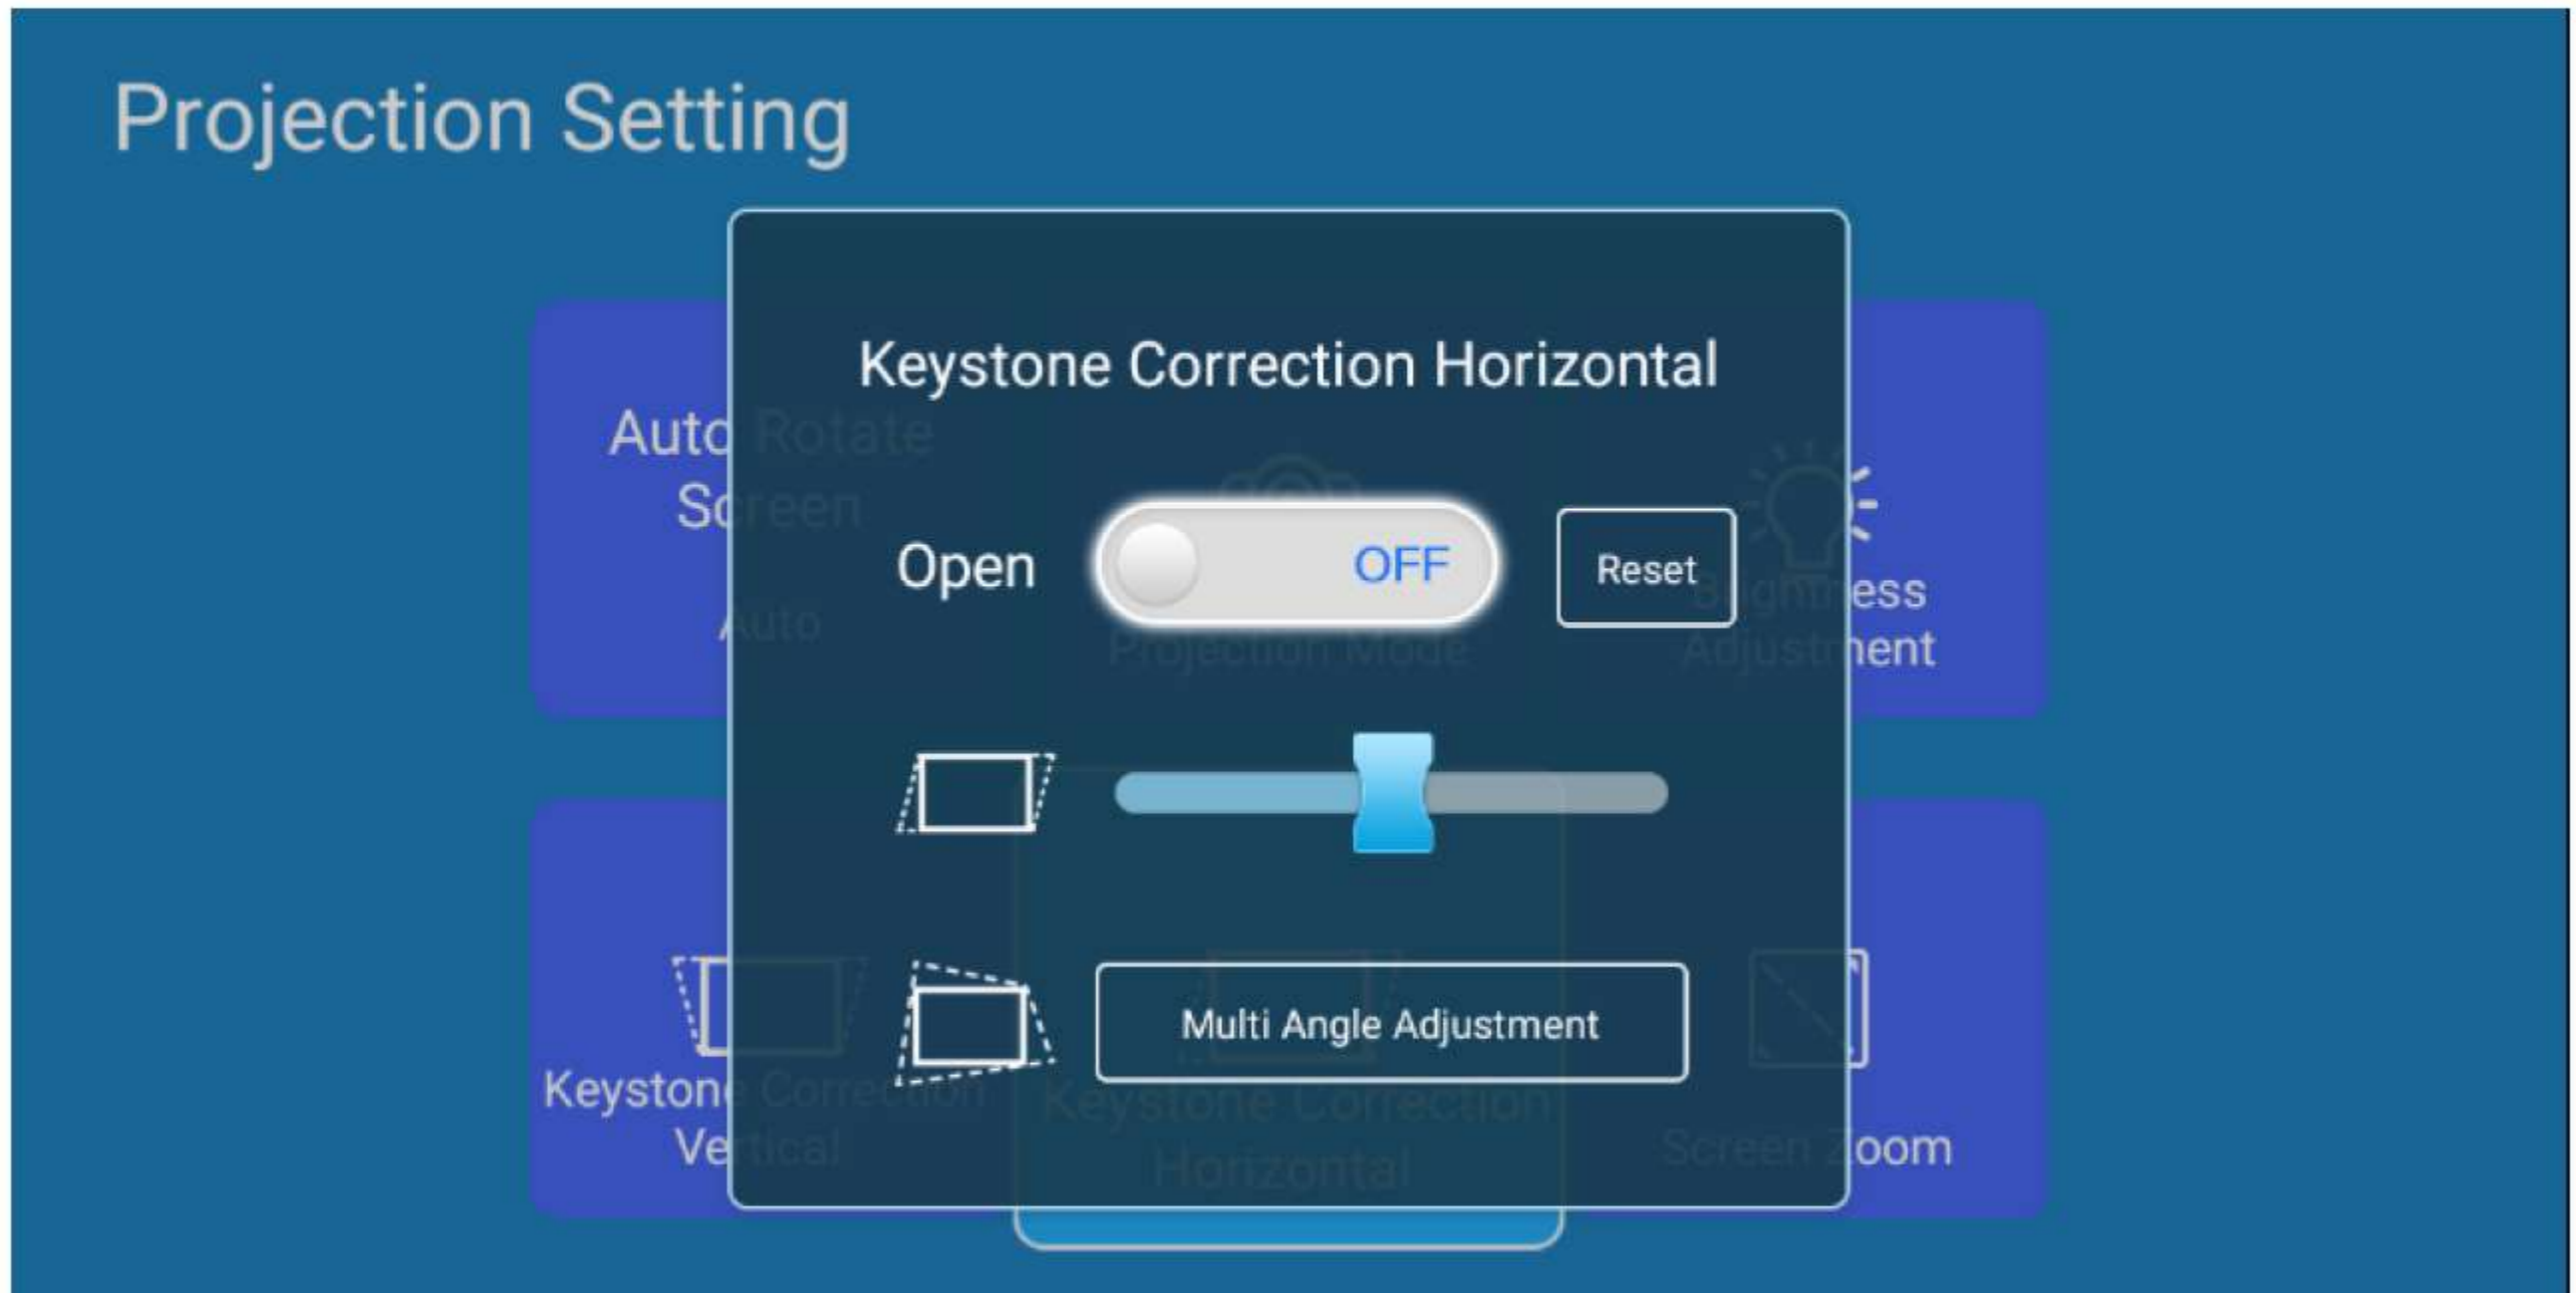

WiFi NETWORK SETTINGS

Enter "Settings" on the main interface → "Networking Setting" → "Wi-Fi Setting", click the switch to "ON" state, select the network you want to connect to, enter the password and click "Link".

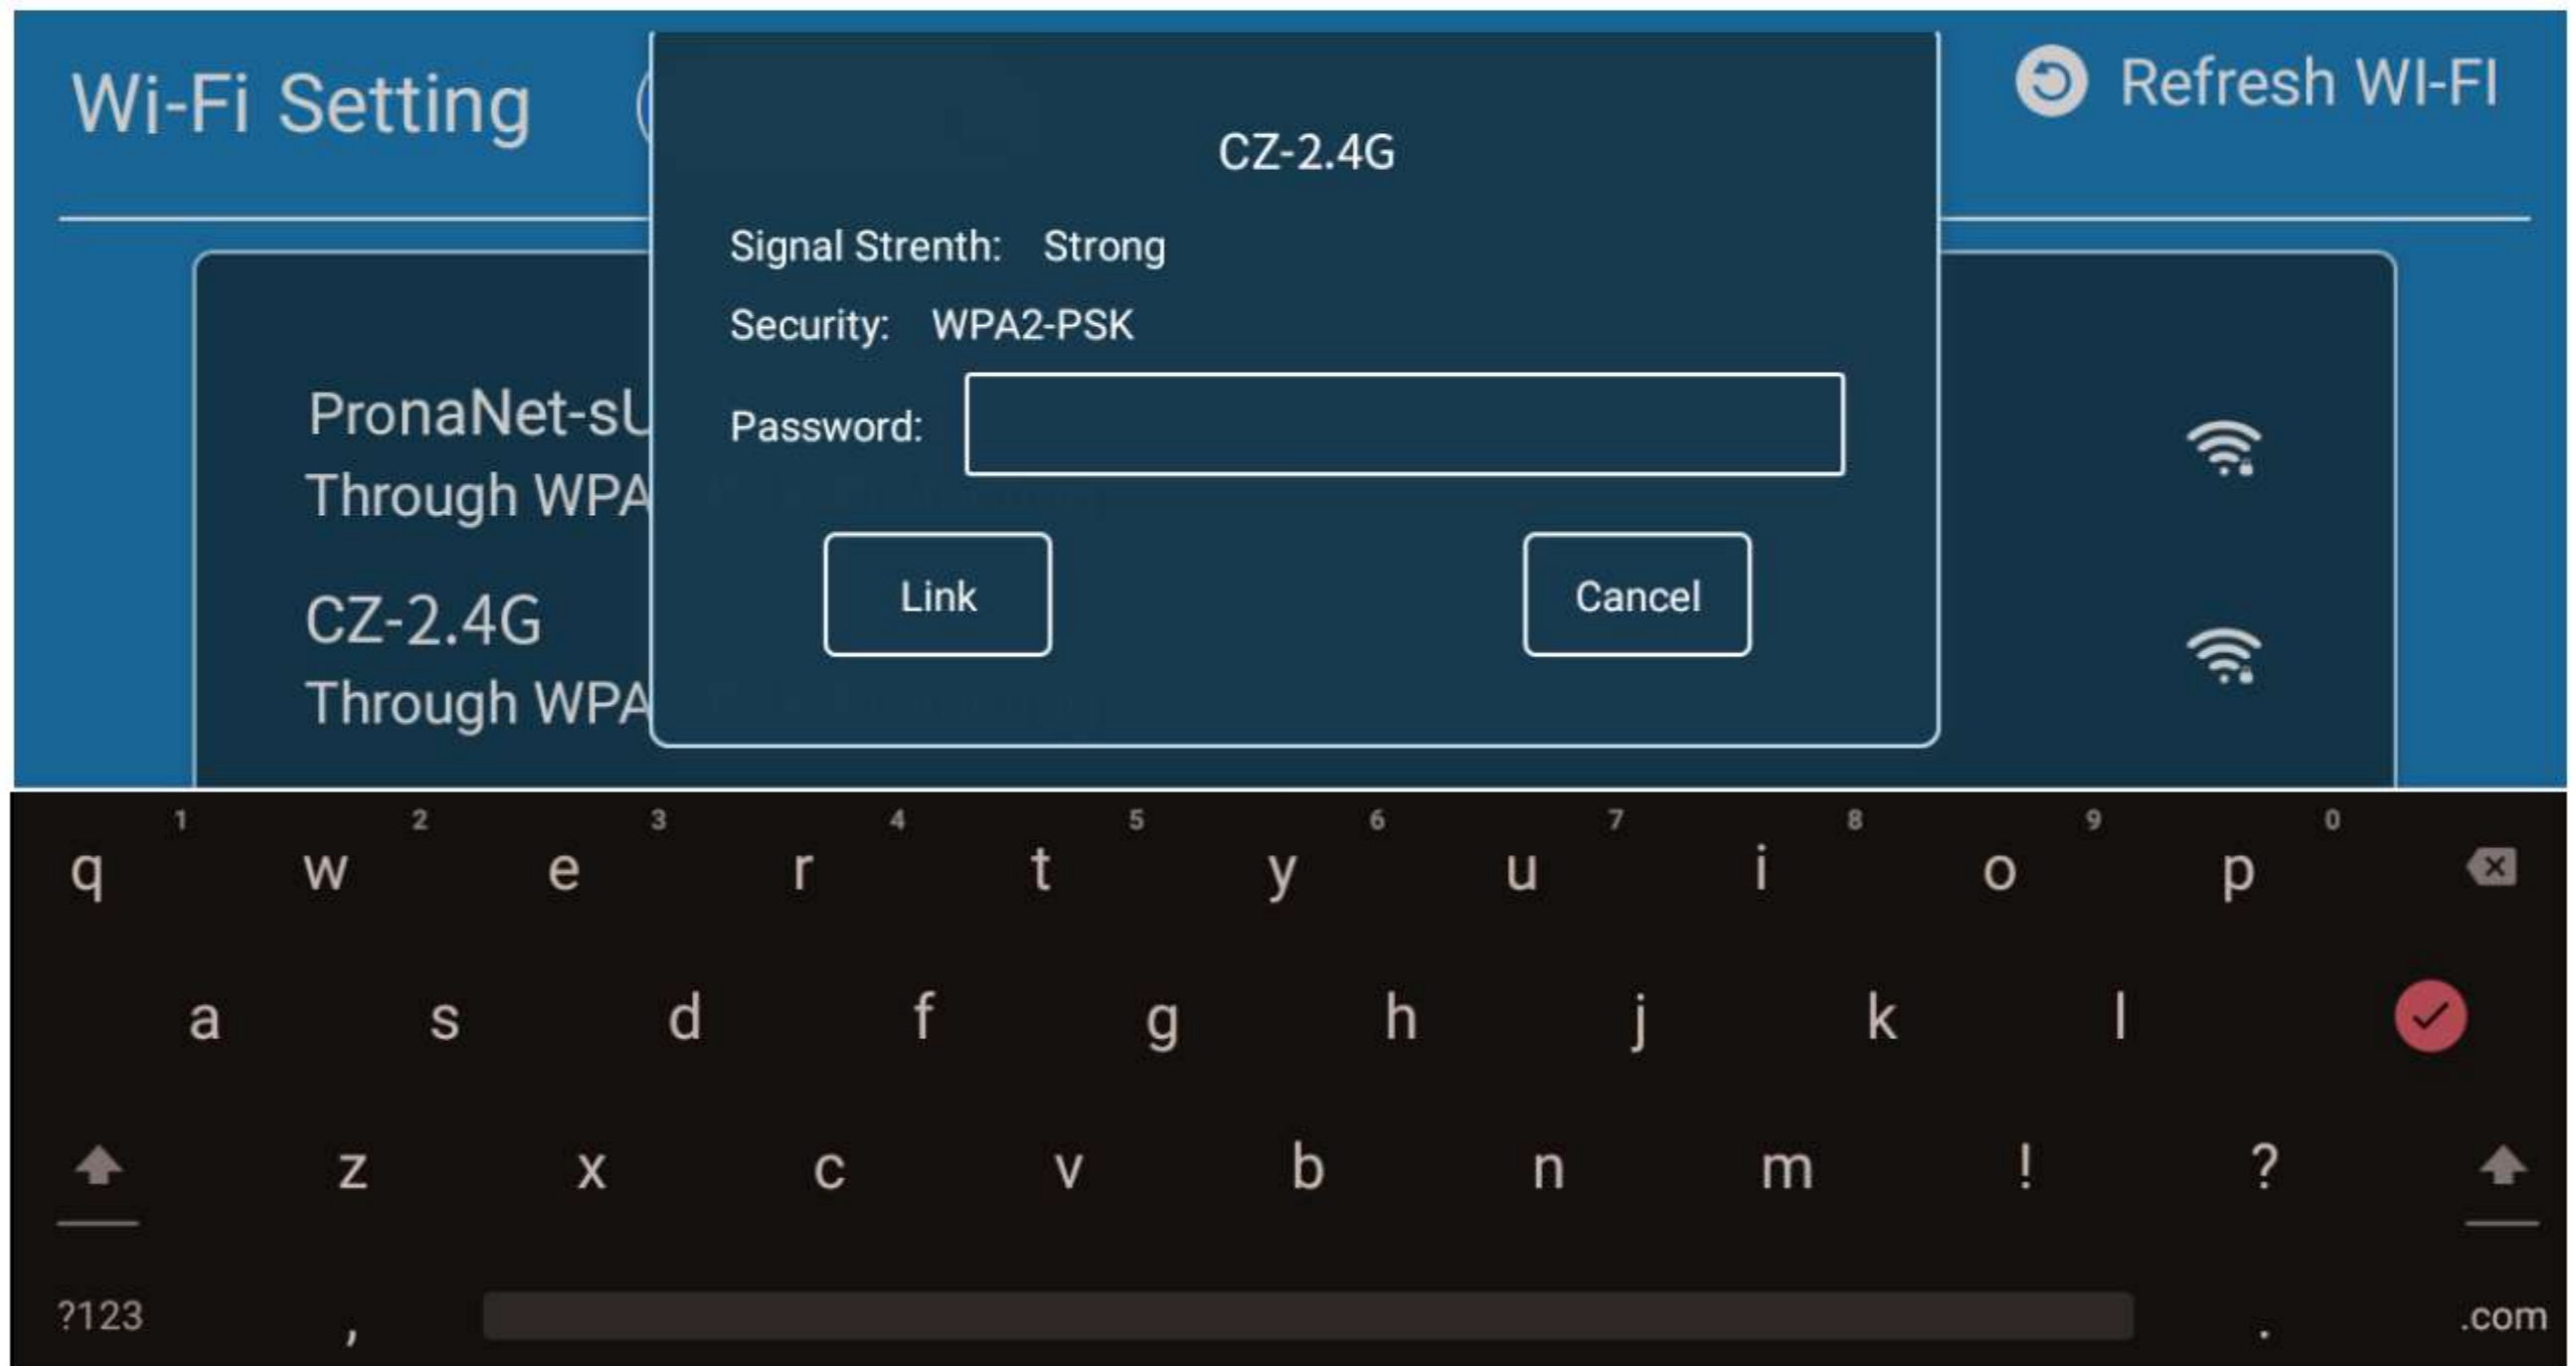

HOTSPOT SETTING

Enter "Settings" on the main interface → "Networking Setting" → "Hotspot Setting", click the switch to "ON" state, you can set the parameters, click "OK", and then it searches for and connects the hotspots of projectors on other devices.

Hotspot Setting ON

Network SSID

Security

 
Password

Select AP Band

Show Password


BLUETOOTH SETTING

Enter "Settings" on the main interface → "Bluetooth Setting" click the switch to the "ON" state, search for the device which you want to connect, pairing.

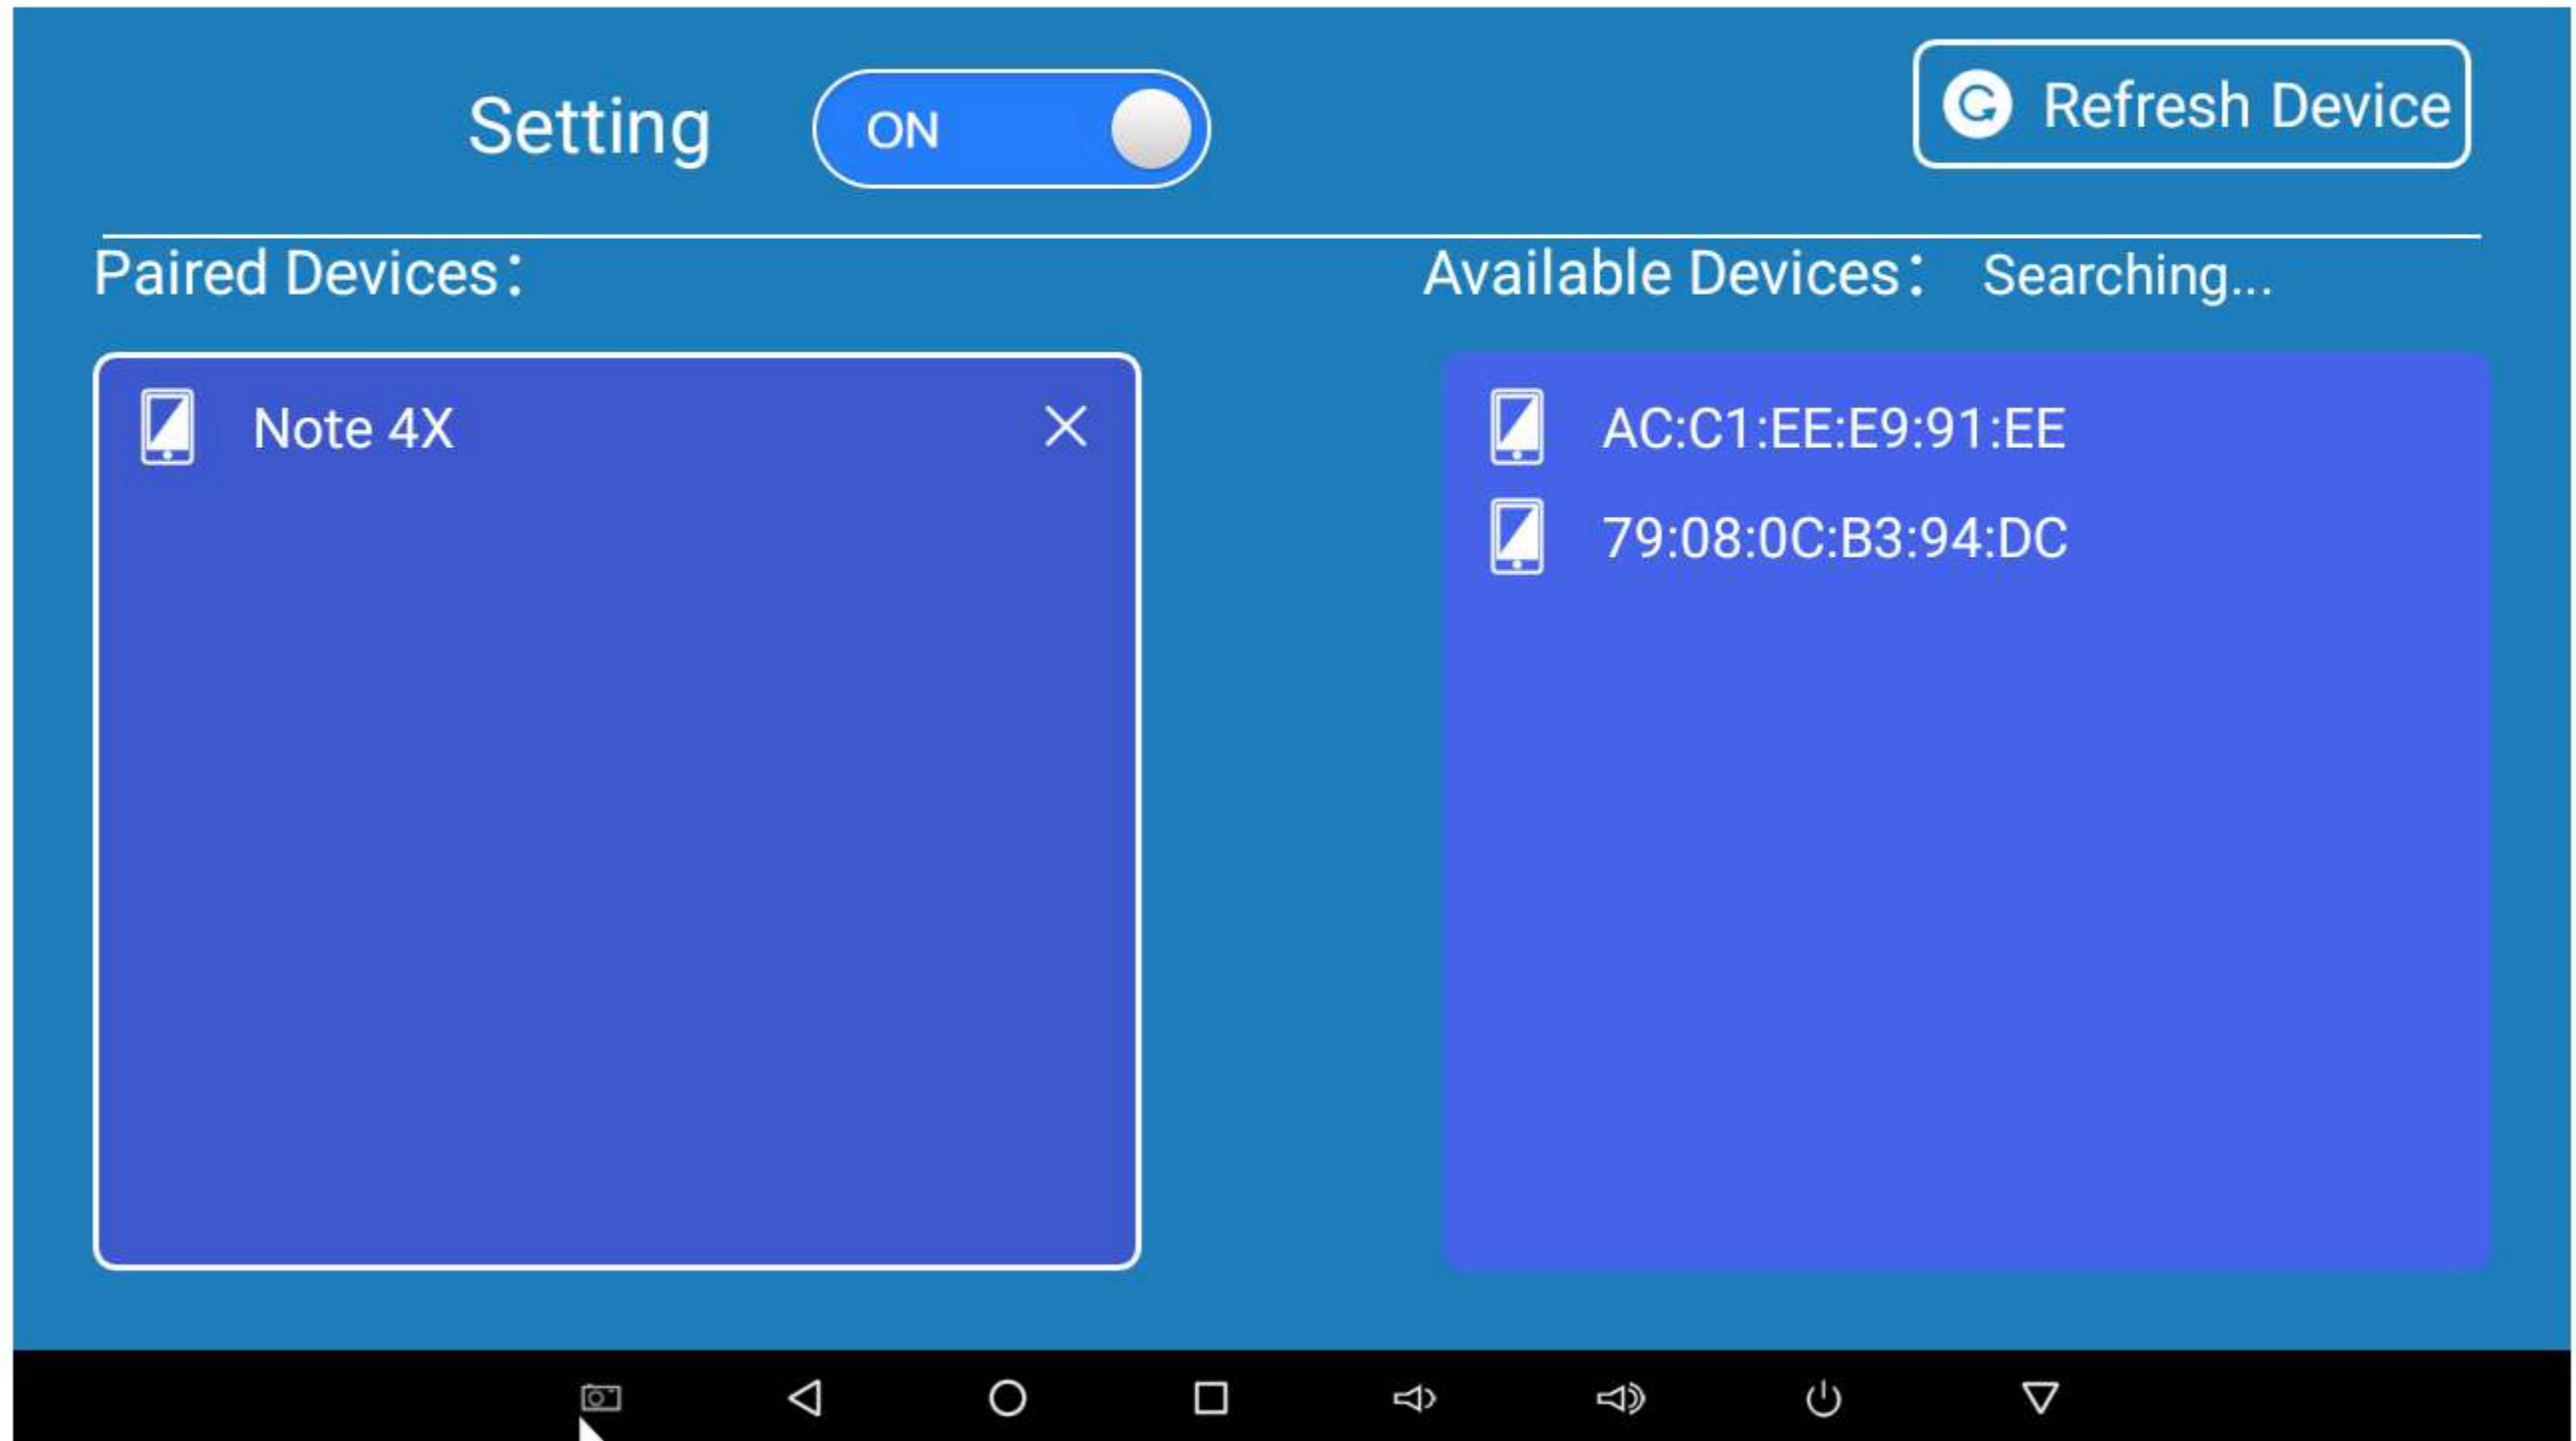


LANGUAGE SETTINGS

 
Enter "Settings" on the main interface → "Language Setting" and select the language you want to switch to.

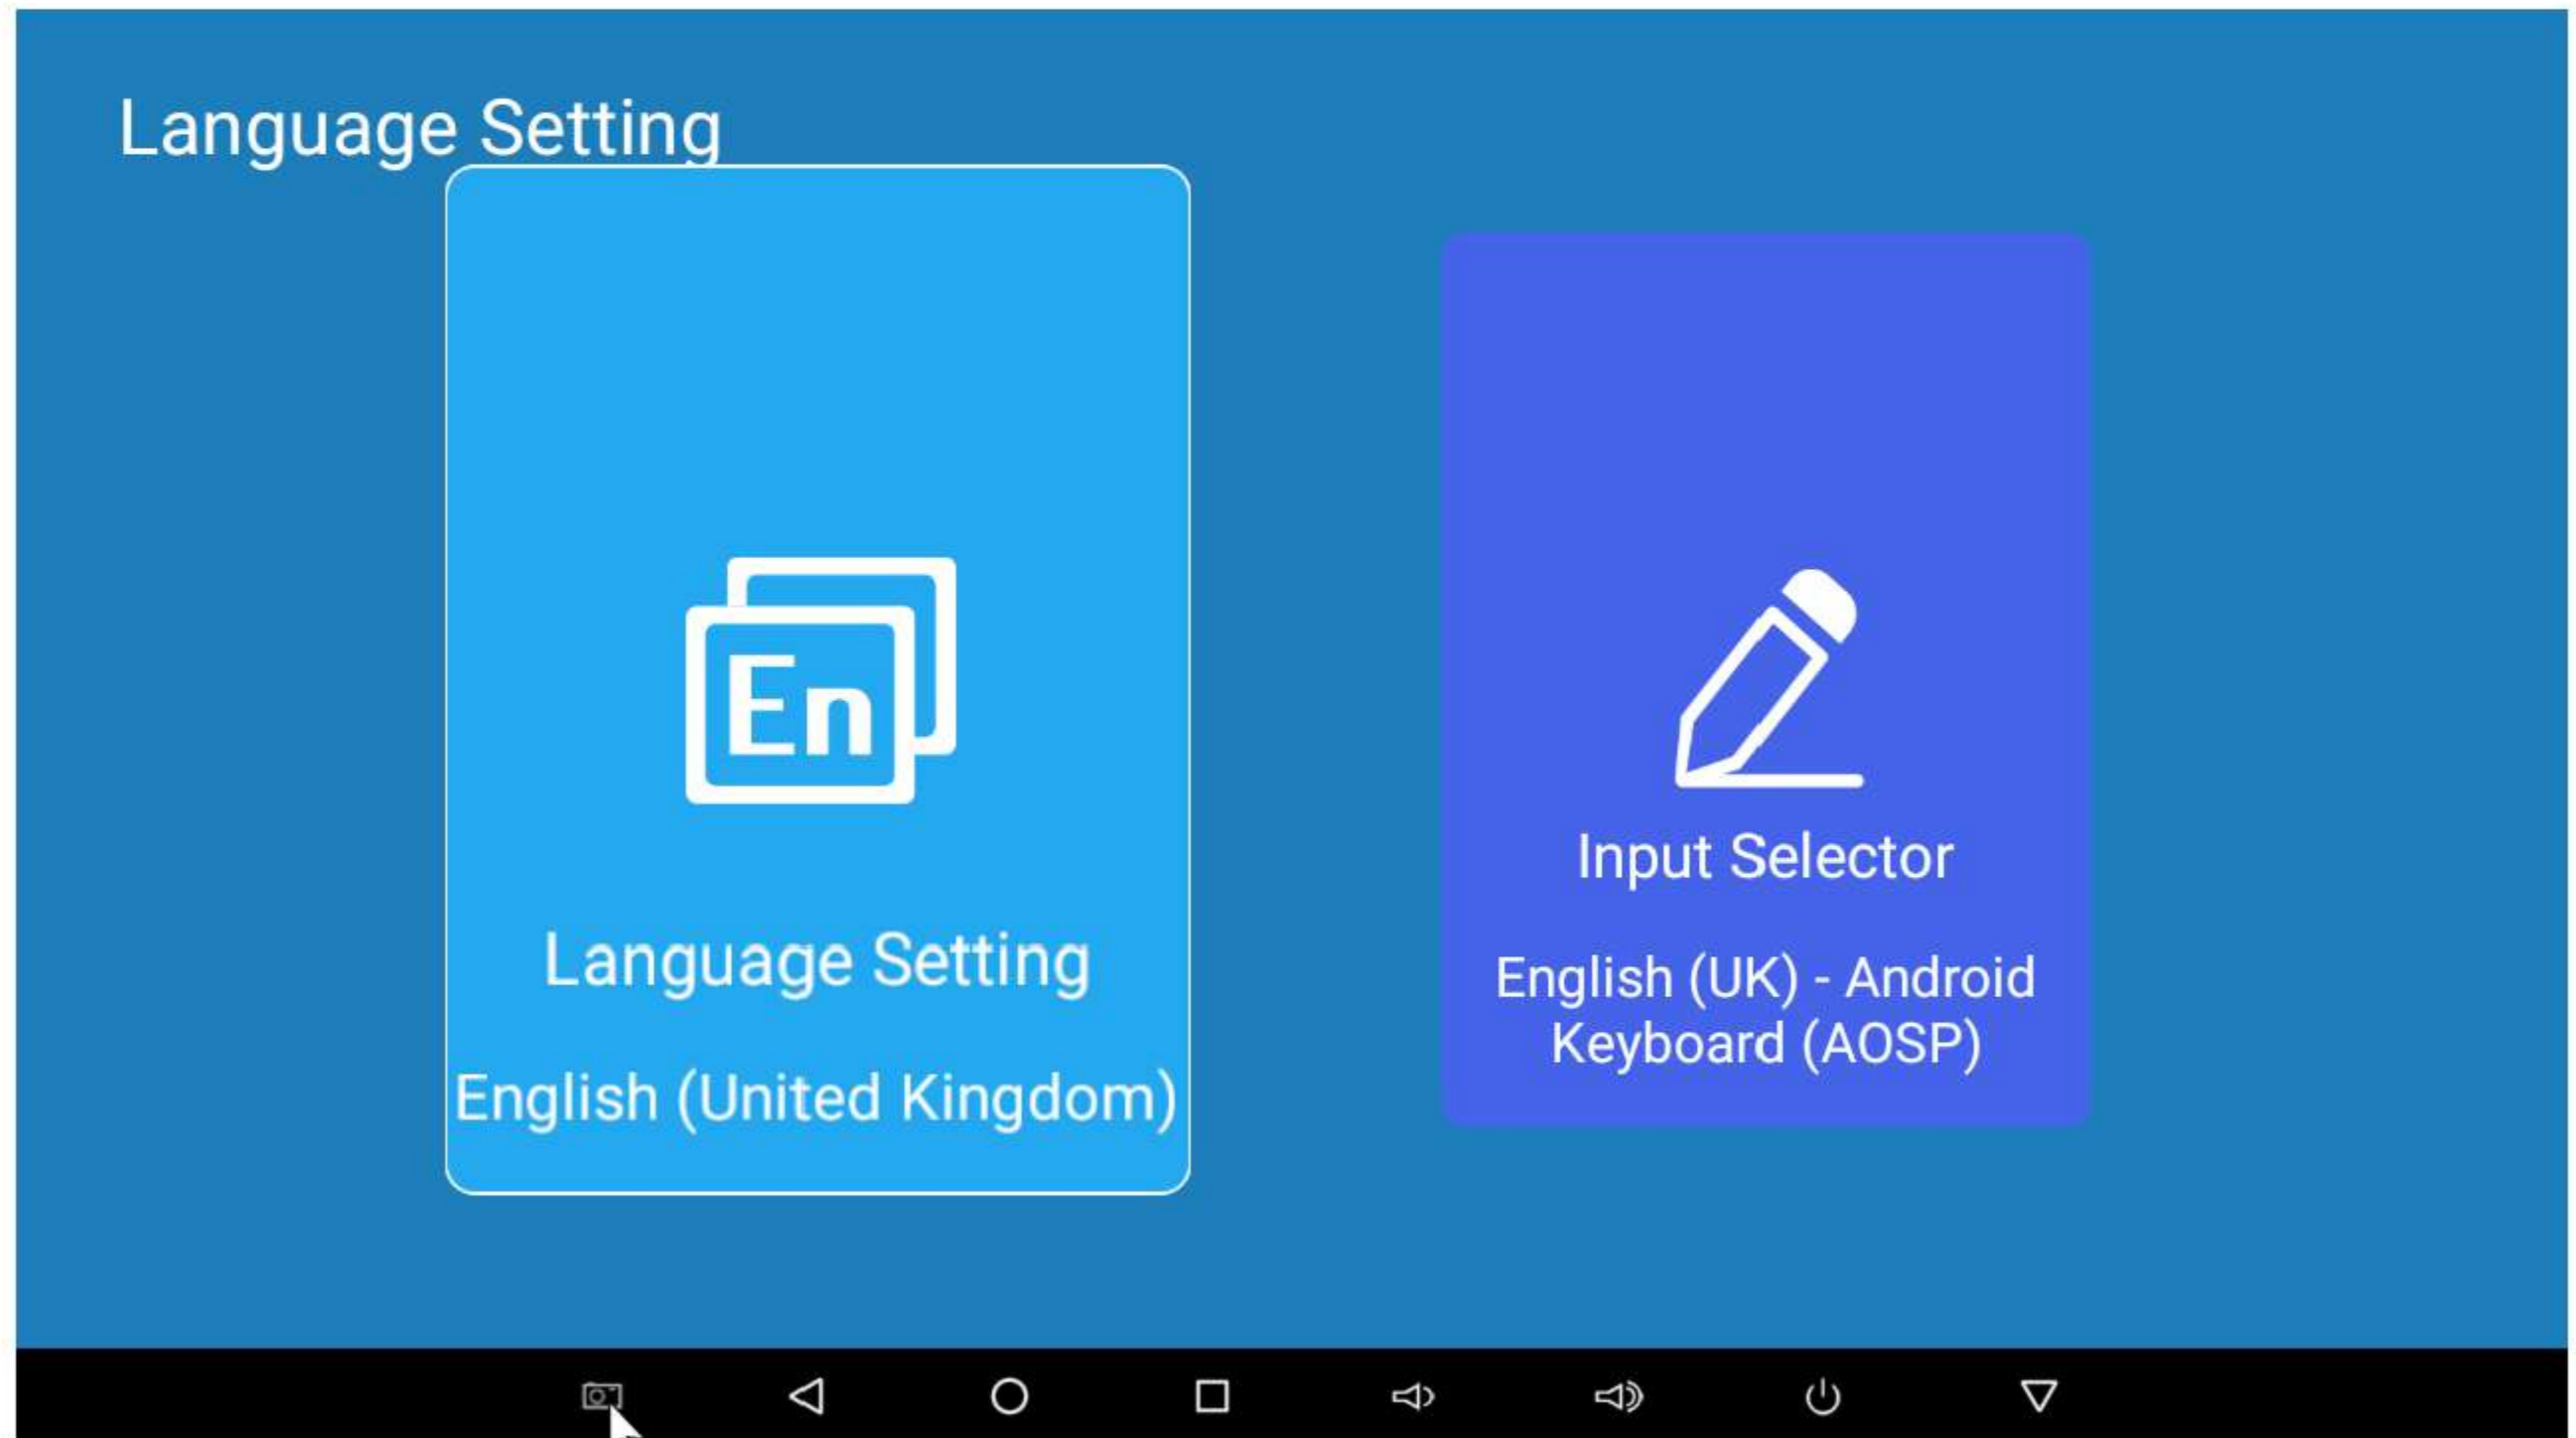

iMIRROR / AIRPLAY

For iOS System

 
1. iPhone/iPad and projector need to be connected to the same network. In the absence of a network, the projector can be connected to the hotspot of iPhone/iPad.
2. Enter "iMirror" APP on the projector.
3. Open "Screen Mirroring"  on the iPhone/iPad, and then search the device name of projector matching.

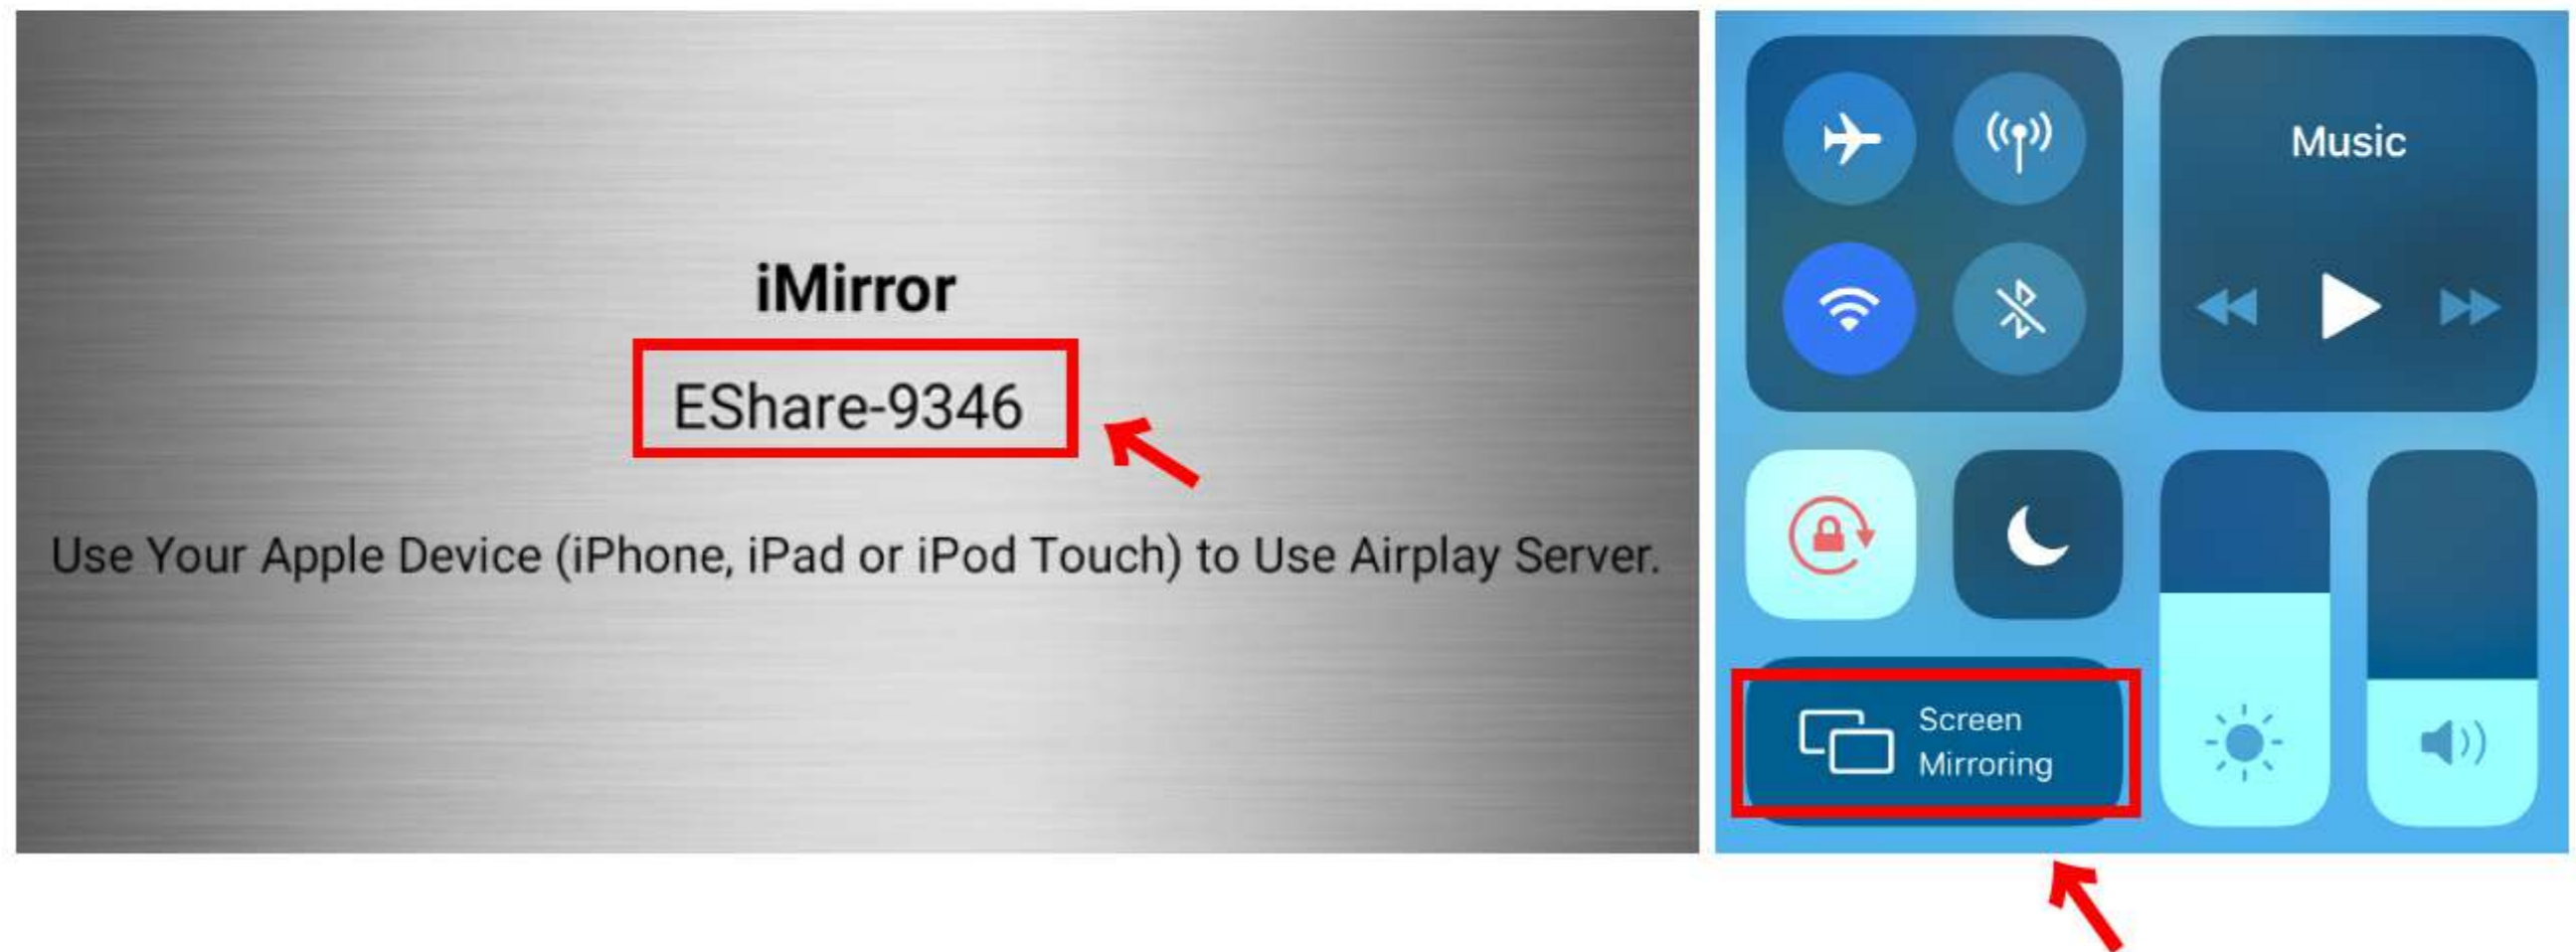

MIRACAST (ANDROID)

For System

1. Android devices and projector need to be connected to the same network.
2. Enter "iMirror" APP on the projector.
3. Enter "Wireless projection" interface on Android devices, and then search the device name of projector for matching.

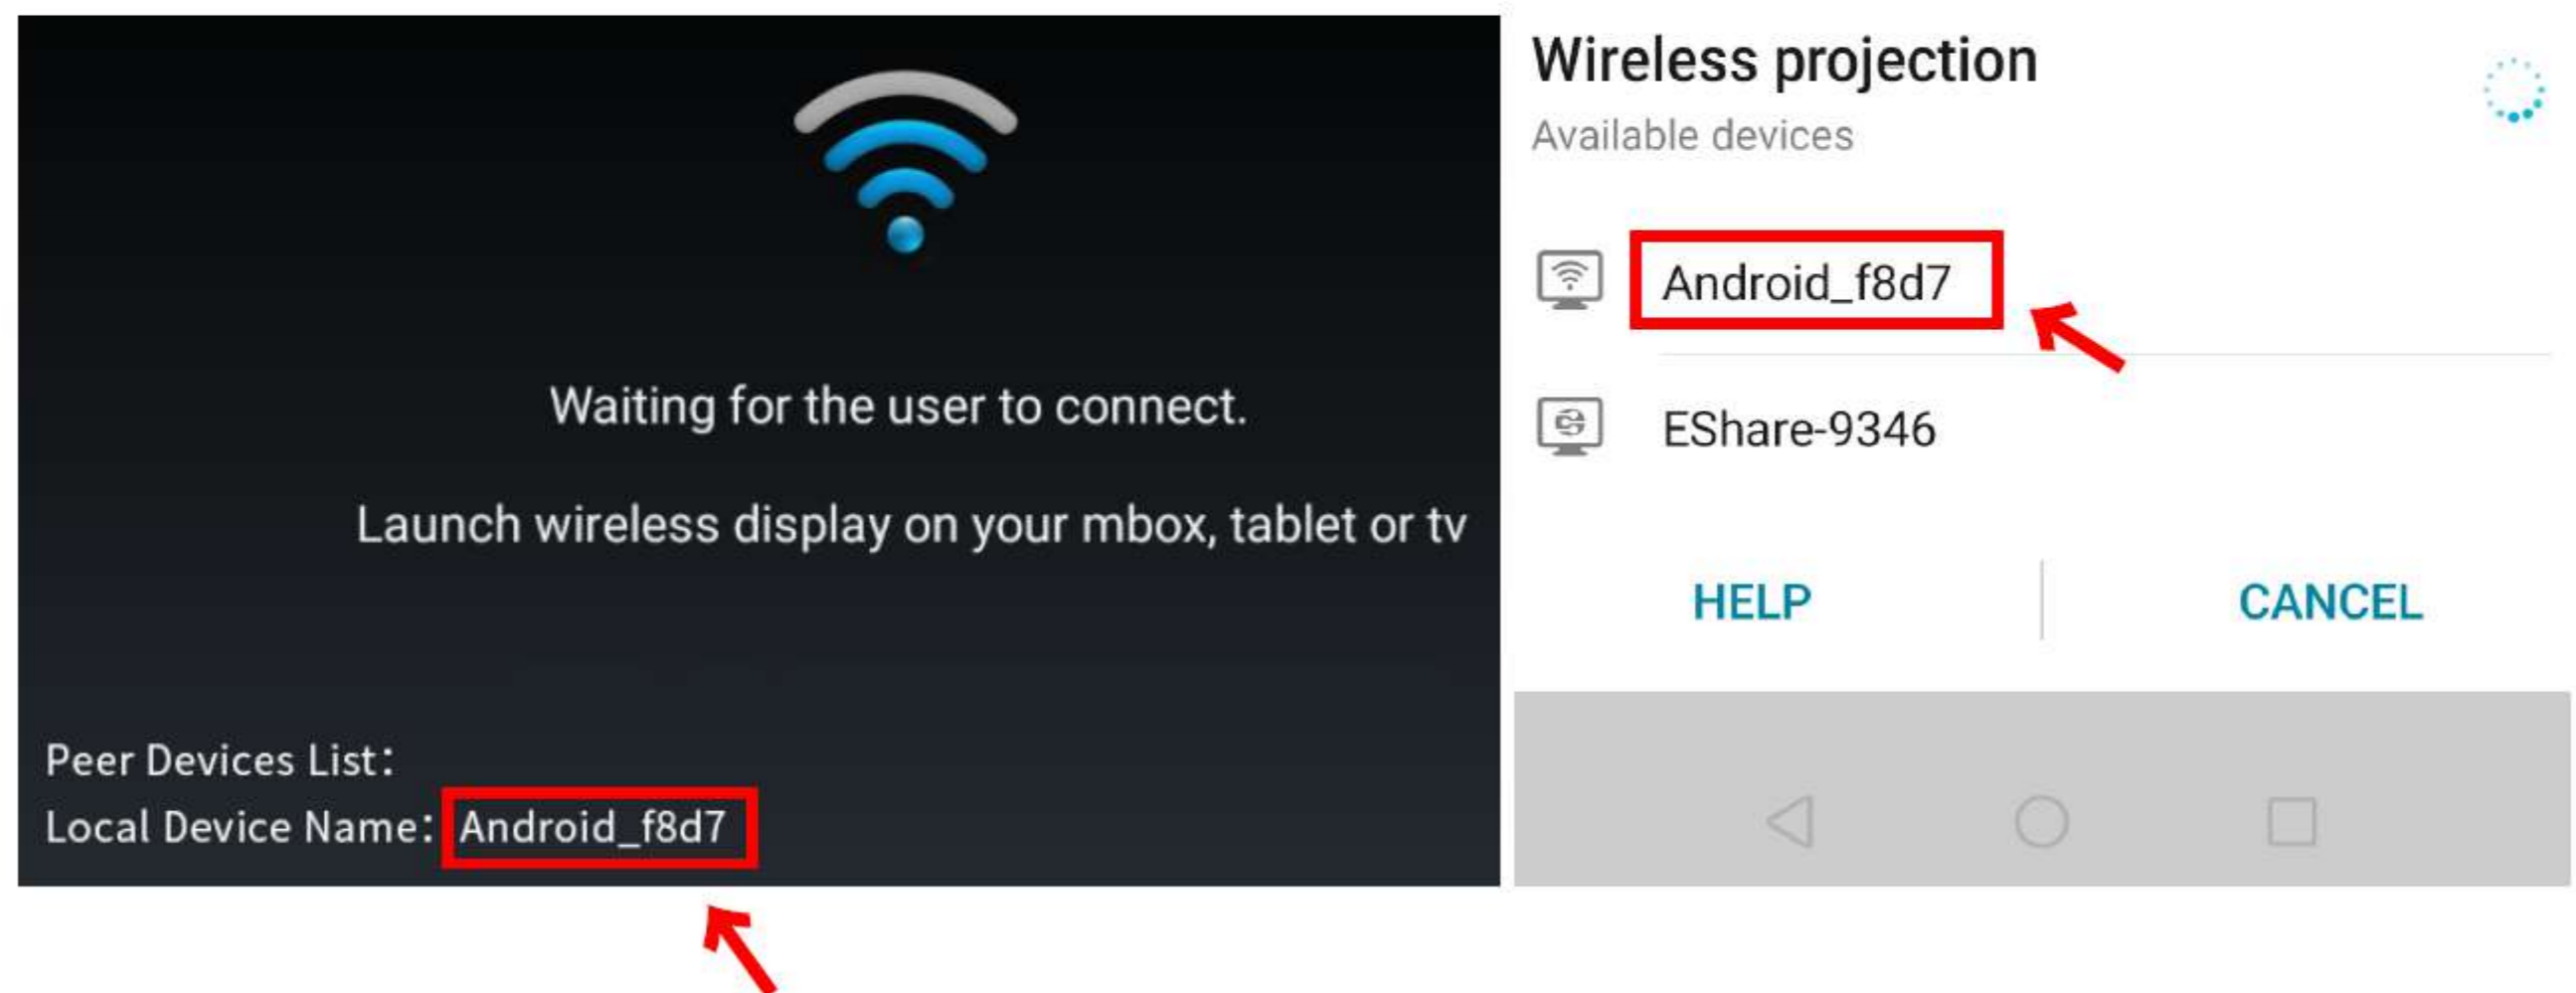

ESHARE SERVER SETTINGS

For Android/iPhone/iPad

 
1. Devices and projector need to be connected to the same network. In the absence of a network, projector can be connected to the hotspot of the device
2. Enter the "EShare" APP on the projector.
3. Following the steps of the interface display, download and install the "EShare" APP on other devices.
4. When the "EShare" APP is installed, search for the device name of projector for matching.



PLAYING 3D VIDEO / MOVIES*

* ONLY .MP4/MKV 'SIDE-BY-SIDE' 3D VIDEOS ARE COMPATIBLE - ACTIVE SHUTTER 3D GLASSES REQUIRED
USE THE LINKS BELOW TO ACCESS MORE INFORMATION

1. Before playing 3D video, you must turn off the "Keystone Correction Horizontal" and "Screen Zoom" functions in "Settings".
2. Enter the "Movie Player" APP to play 3D video, click on the "3D" option in the menu bar, and set up the "Play 3D Mode" **L/R**

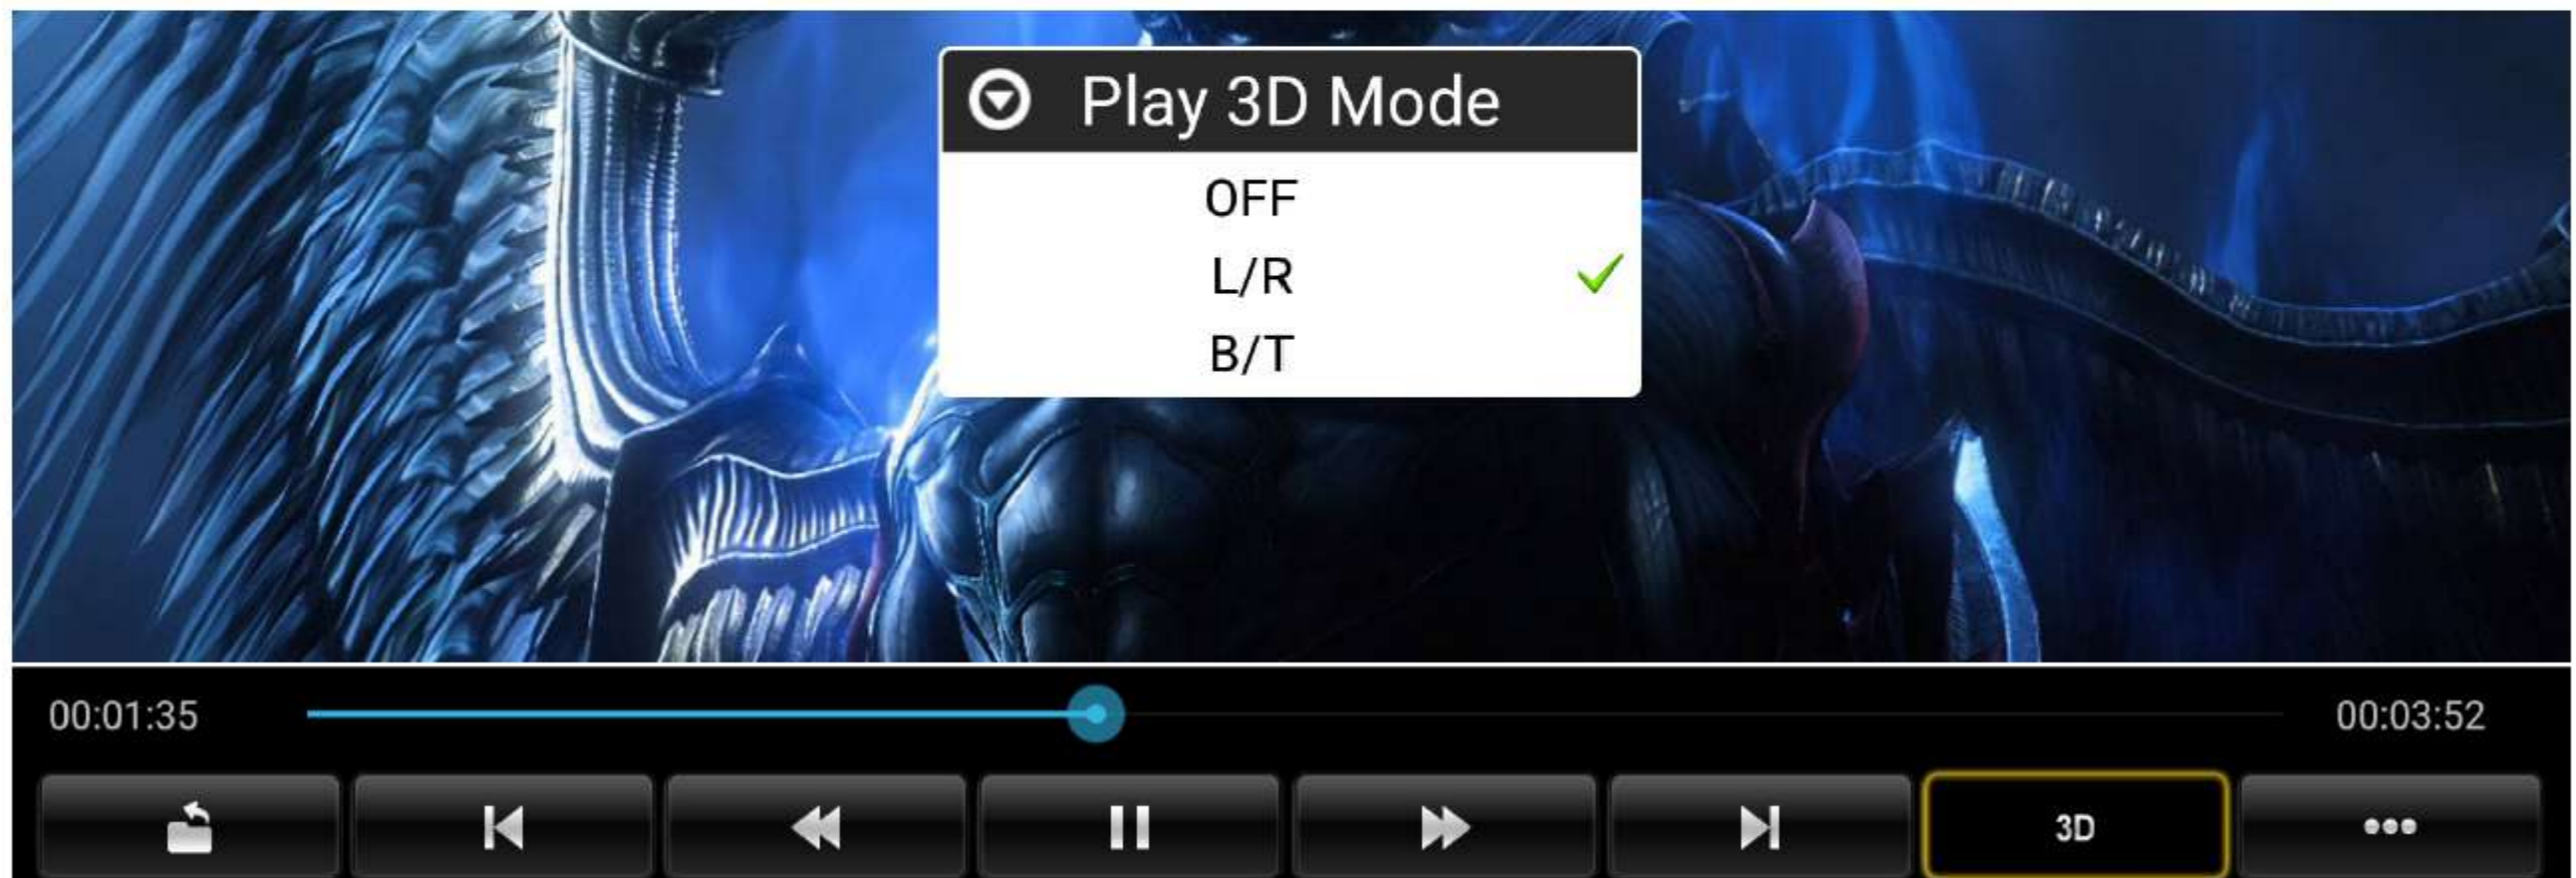

ACTIVE SHUTTER 3D GLASSES - www.basegadgets.com/3d

HOW TO RIP YOUR 3D VIDEOS TO 'SBS' MP4/ MKV FORMAT - www.basegadgets.com/3d

 
INSTALLING ANDROID APPS

APP Install

1. If the APK is downloaded, enter the "App Center" → "App Installer", find the location of the APK , click and install it.
2. If the APK is not downloaded, you can download and install it in other ways.


APP Uninstall

Enter "Settings" on the main interface → "Other Setting" → "Apps & notifications", click the App that needs to be uninstalled.

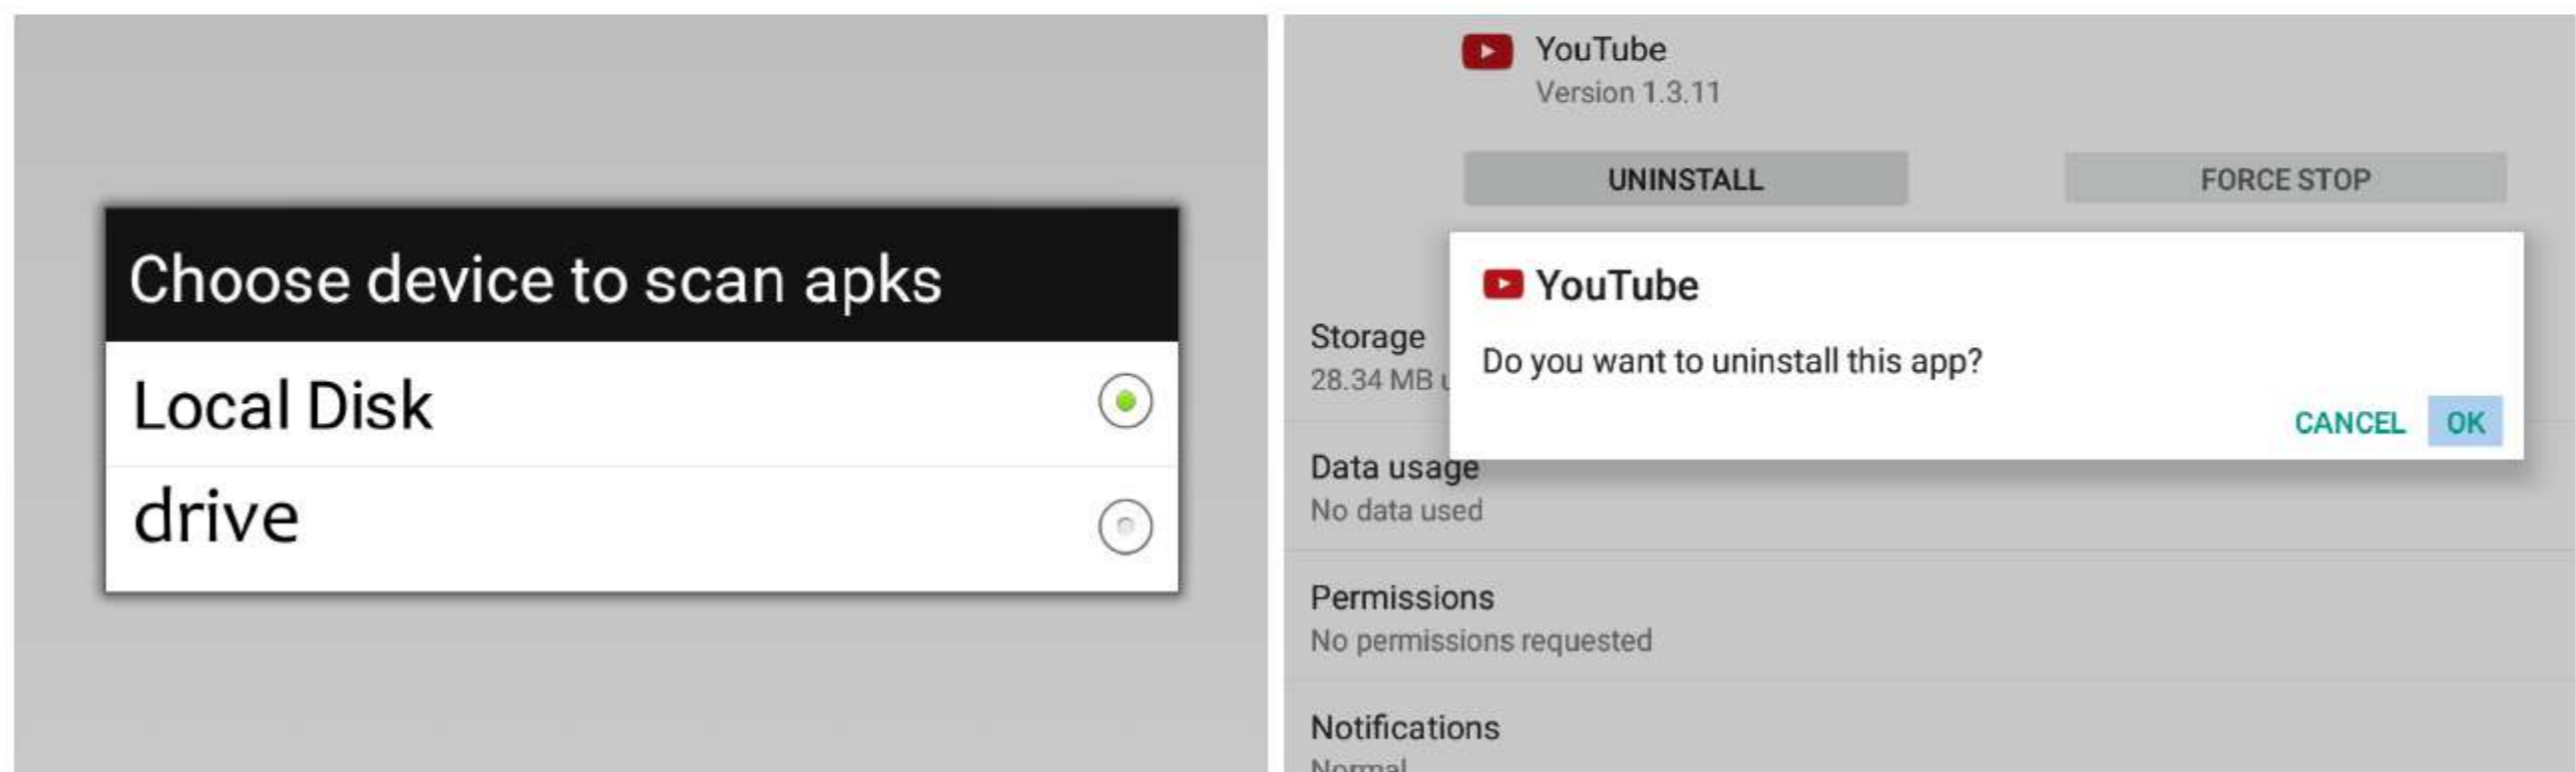


FILE BROWSER

1. Read: Insert the U disk/TF card, "File Browser" APP
2. Edit: Select the menu icon , tick the file you want to operate , deselect the menu icon , select the options you want to operate in the edit icon directory .
3. If "Cut" or "Copy" is selected, you need to first select the directory, and then click the edit icon  to select "Paste".

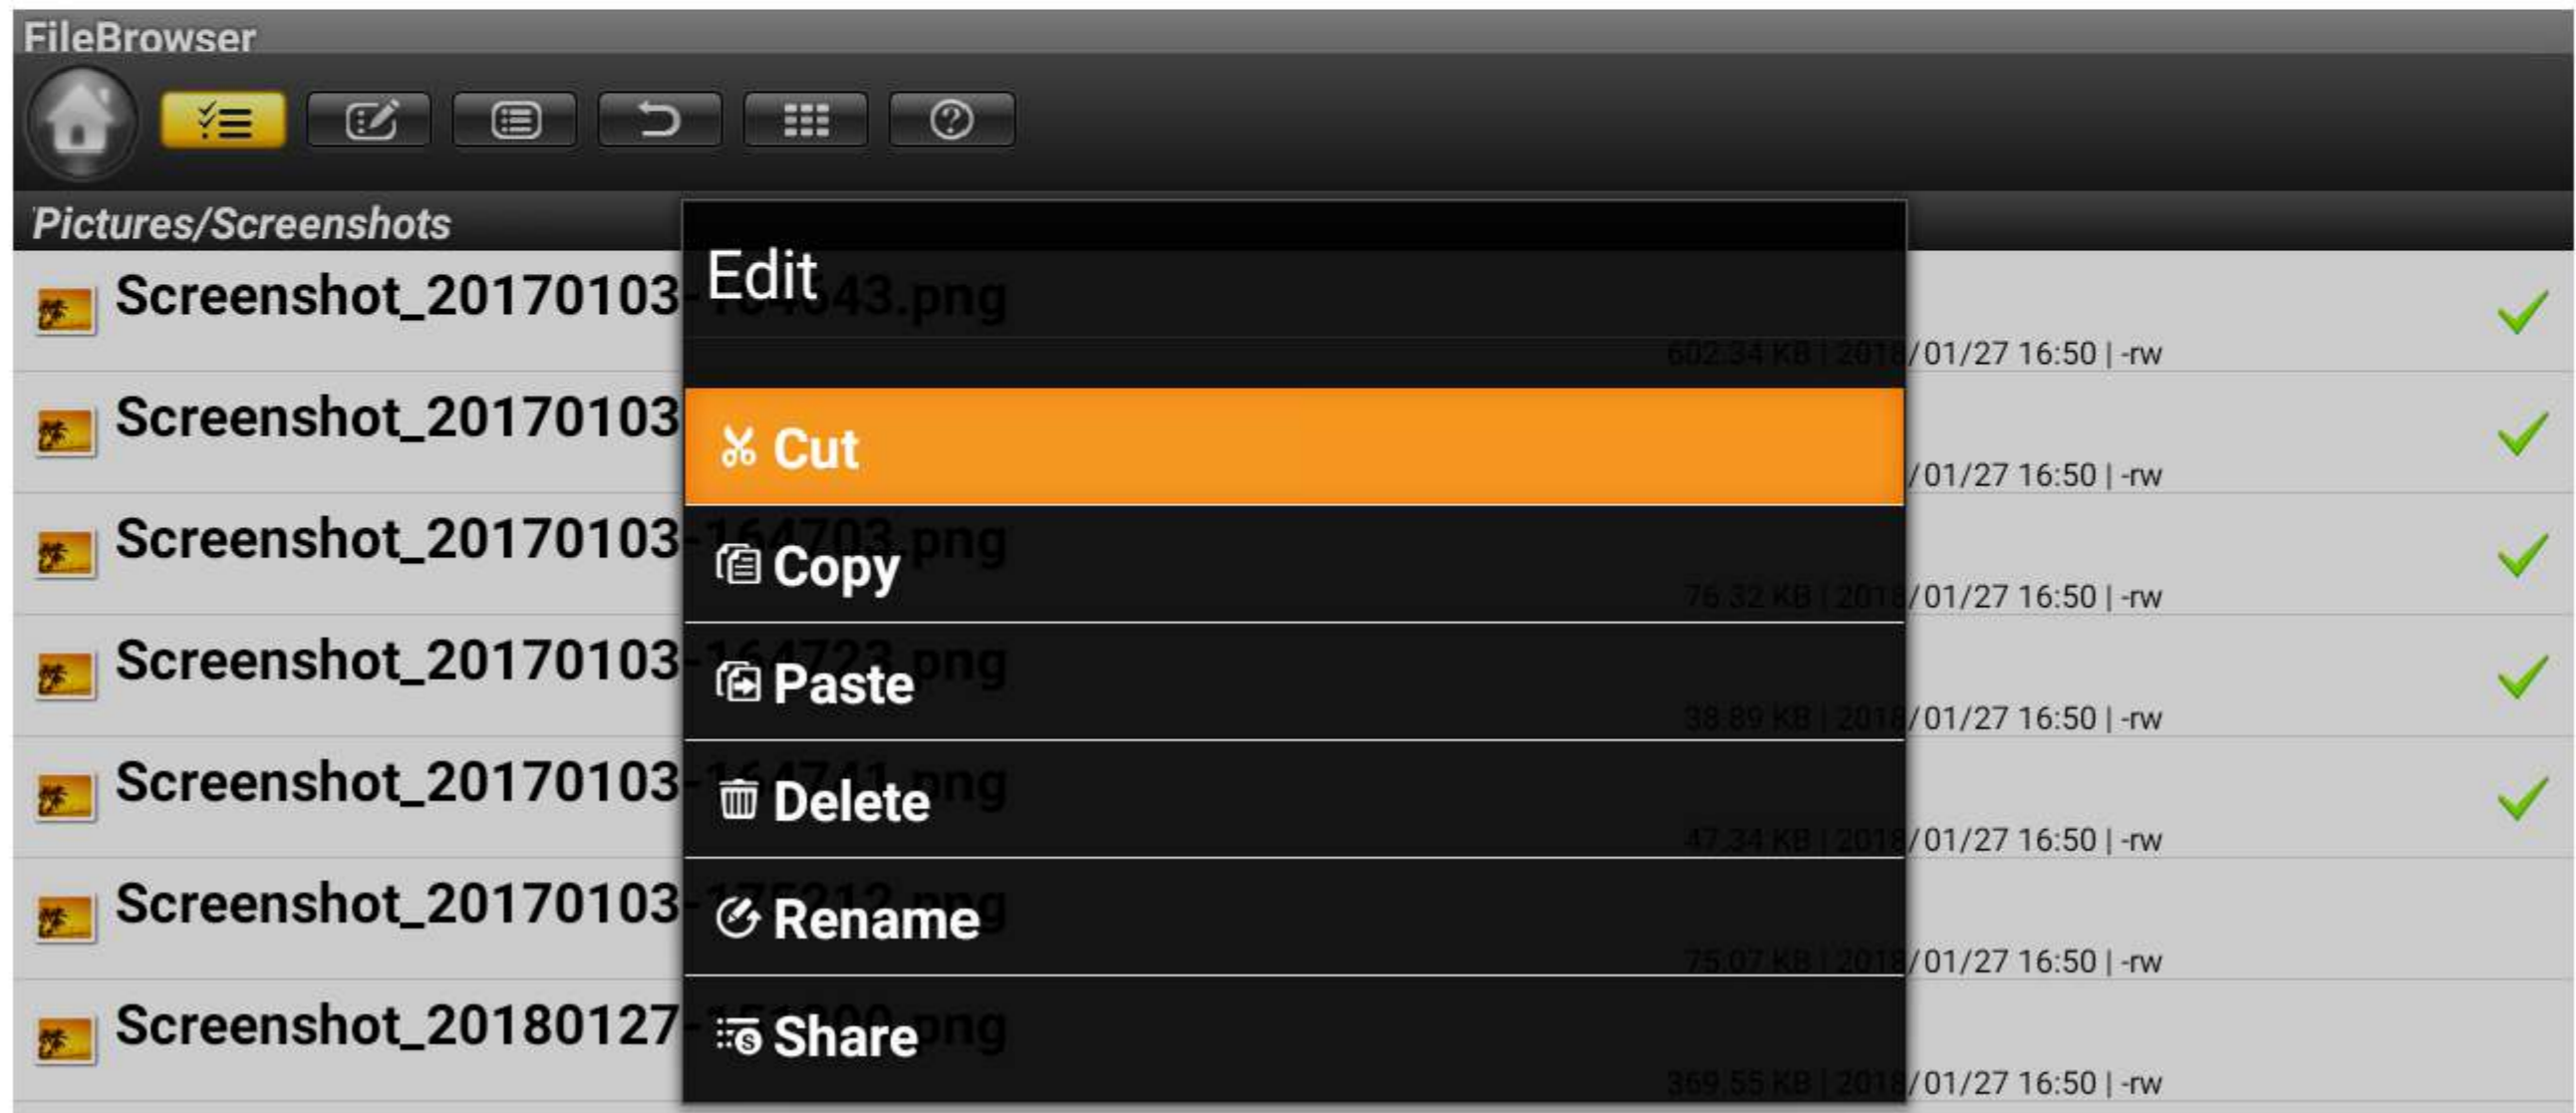

RESET TO FACTORY DEFAULTS

 Enter "Settings" on the main interface → "Other Setting" → "System" → "Advanced" → "Reset options" → "Erase all data (factory reset)" → "RESET PHONE" .

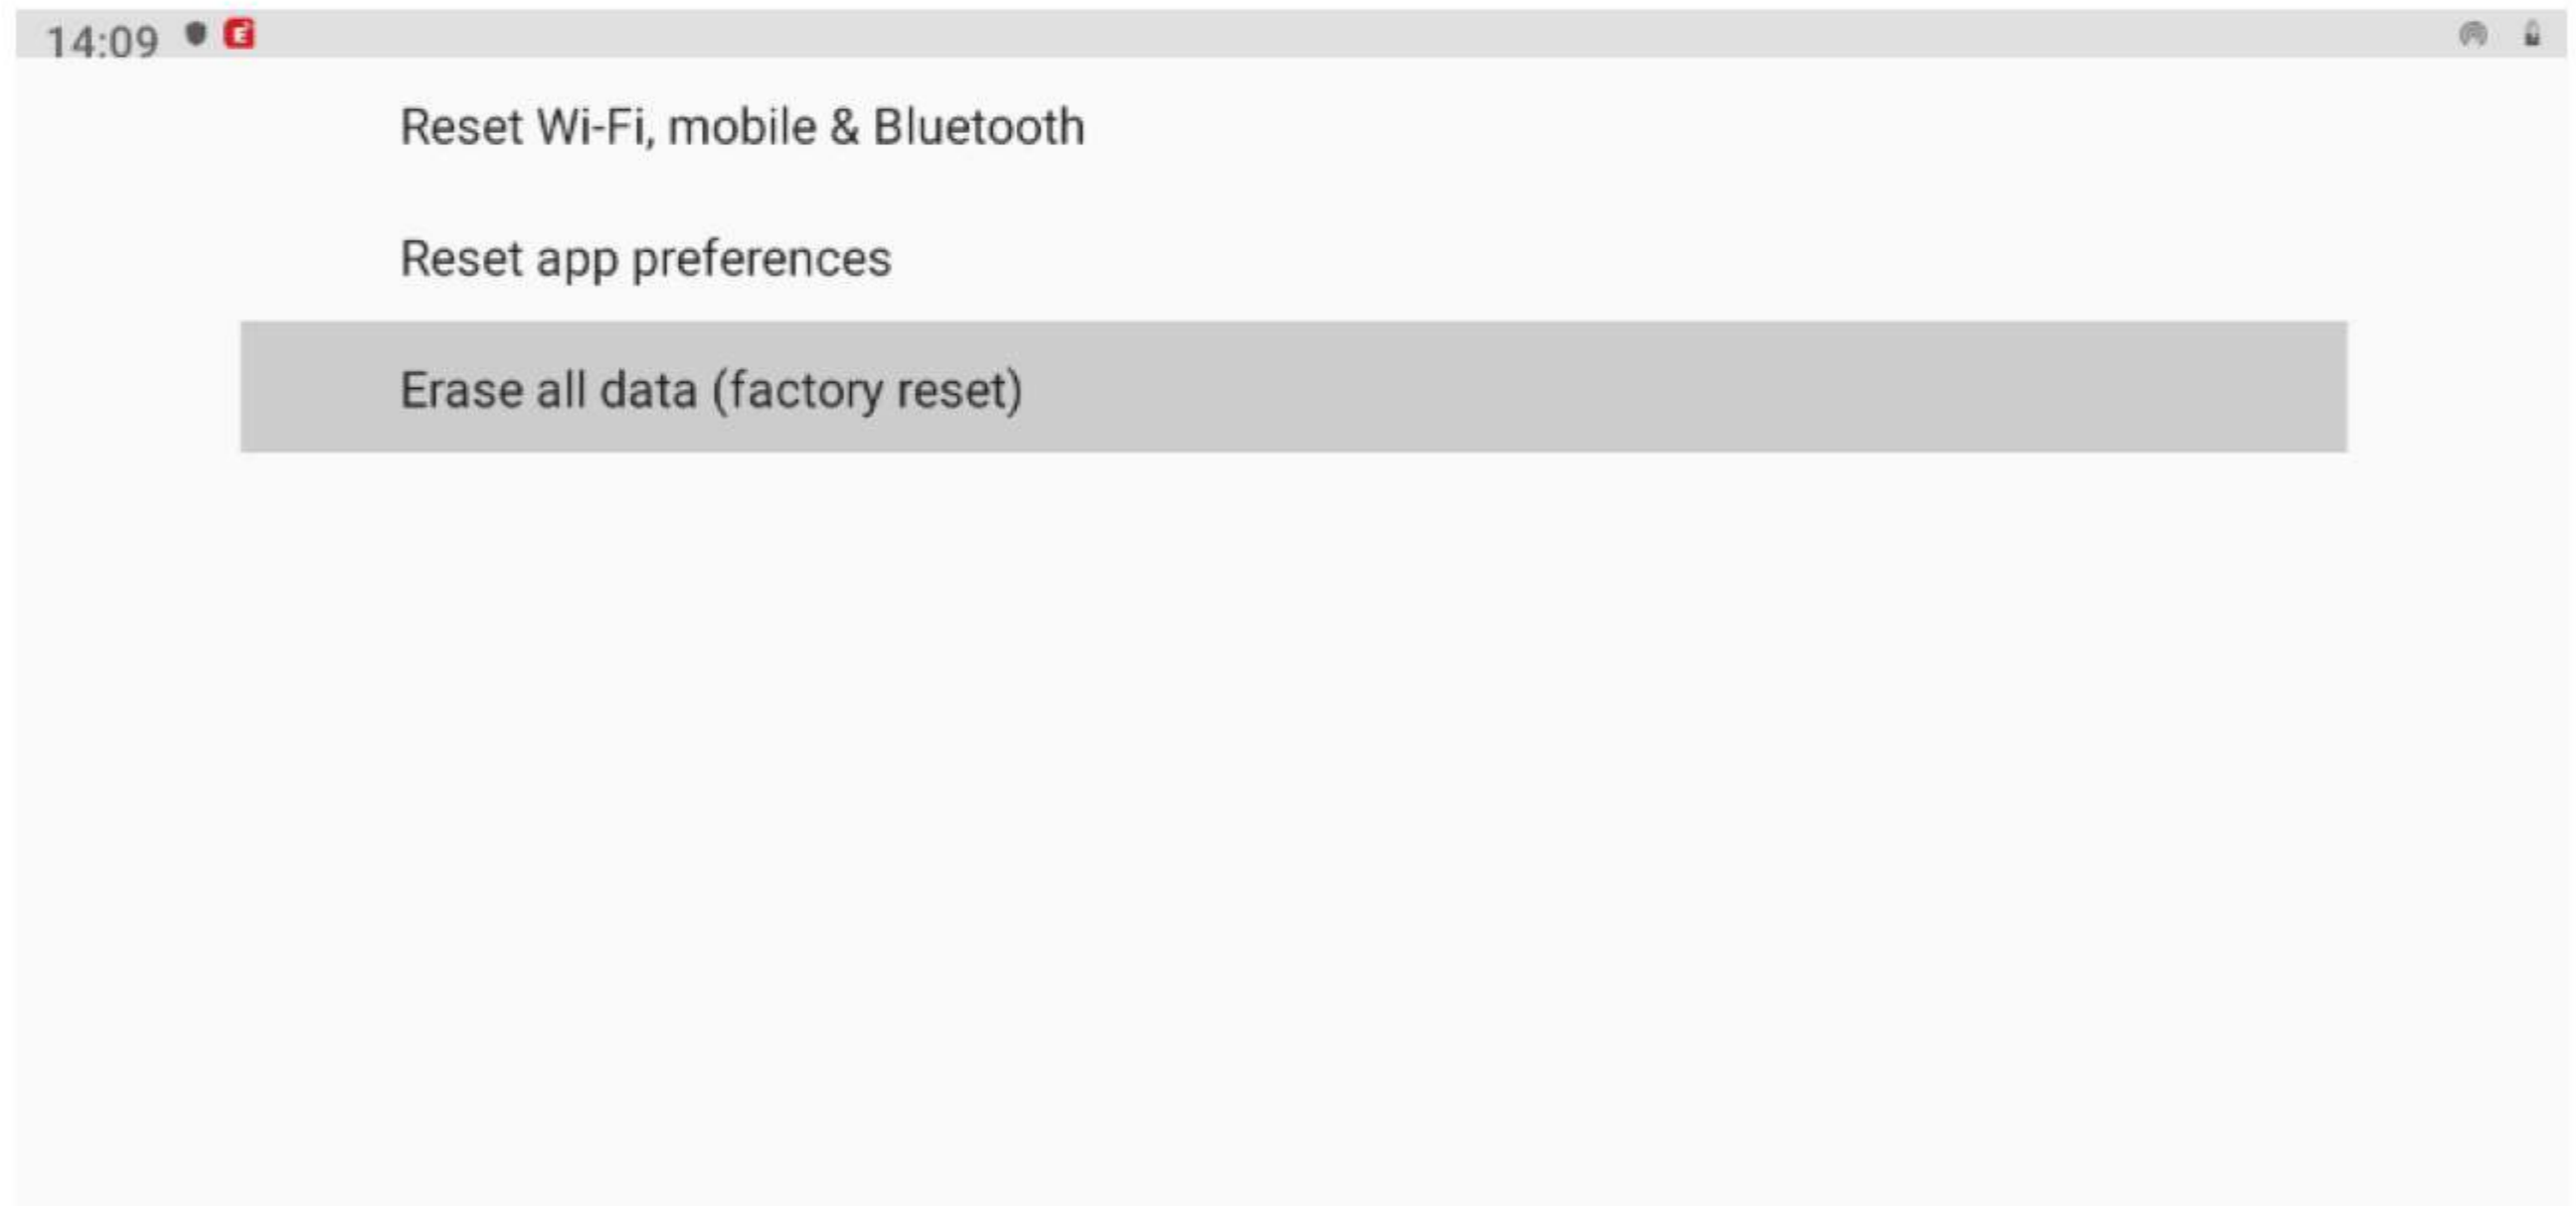


SAFETY TIPS

Notice :

1. Do not put the projector on your leg or any part of your body to prevent injury from the heat.
2. Do not place any liquid or heavy objects on the projector.
3. Avoid using the projector during weather of high humidity or thunderstorms.
4. Do not disassemble the projector at will. There is a risk of electric shock, which also affects the normal maintenance.

Use :

1. Projector is only suitable for use in non-high temperature environment. Do not block the air intake and heat sink during operation or charging. 
2. Do not look directly at the lens of the projector during use, or you may hurt your eyes.
3. Please use the projector in a darker room or draw the curtain to get better projection effect.
4. Please use the projector carefully. Falling or impacting may damage parts or cause blurred images and abnormal display.

Power supply:

1. Please charge the projector with its own power adapter. Other adapters may cause serious damage to the projector.
2. Careful use of power cord to avoid excessive bending. Damage to the power cord may lead to electric shock and fire.
3. After use, the power adapter should be unplugged from the socket.

Clean :

1. Please disconnect the power supply before cleaning the projector. Wipe the fuselage with a clean cotton wool or soft cloth, and then wipe off the residual moisture with a dry cloth.
2. Neutral detergents may be used, but do not use strong detergents or solvents (such as alcohol or diluents).
3. Lens should be cleaned with soft dust-free cloth, lens cloth or lens paper. Be careful not to scratch the lens.
4. Please use a soft brush regularly to clean the heat sink and speaker parts of the projector, otherwise the heat sink will be blocked by dust, which will cause overheating of the projector and even lead to machine failure.